

Canopy Mounted Chandeliers


Install Guide



DISCLAIMER:

Installation, inspection, and maintenance should be performed by qualified electricians to mitigate risks of fire or electrical shock.



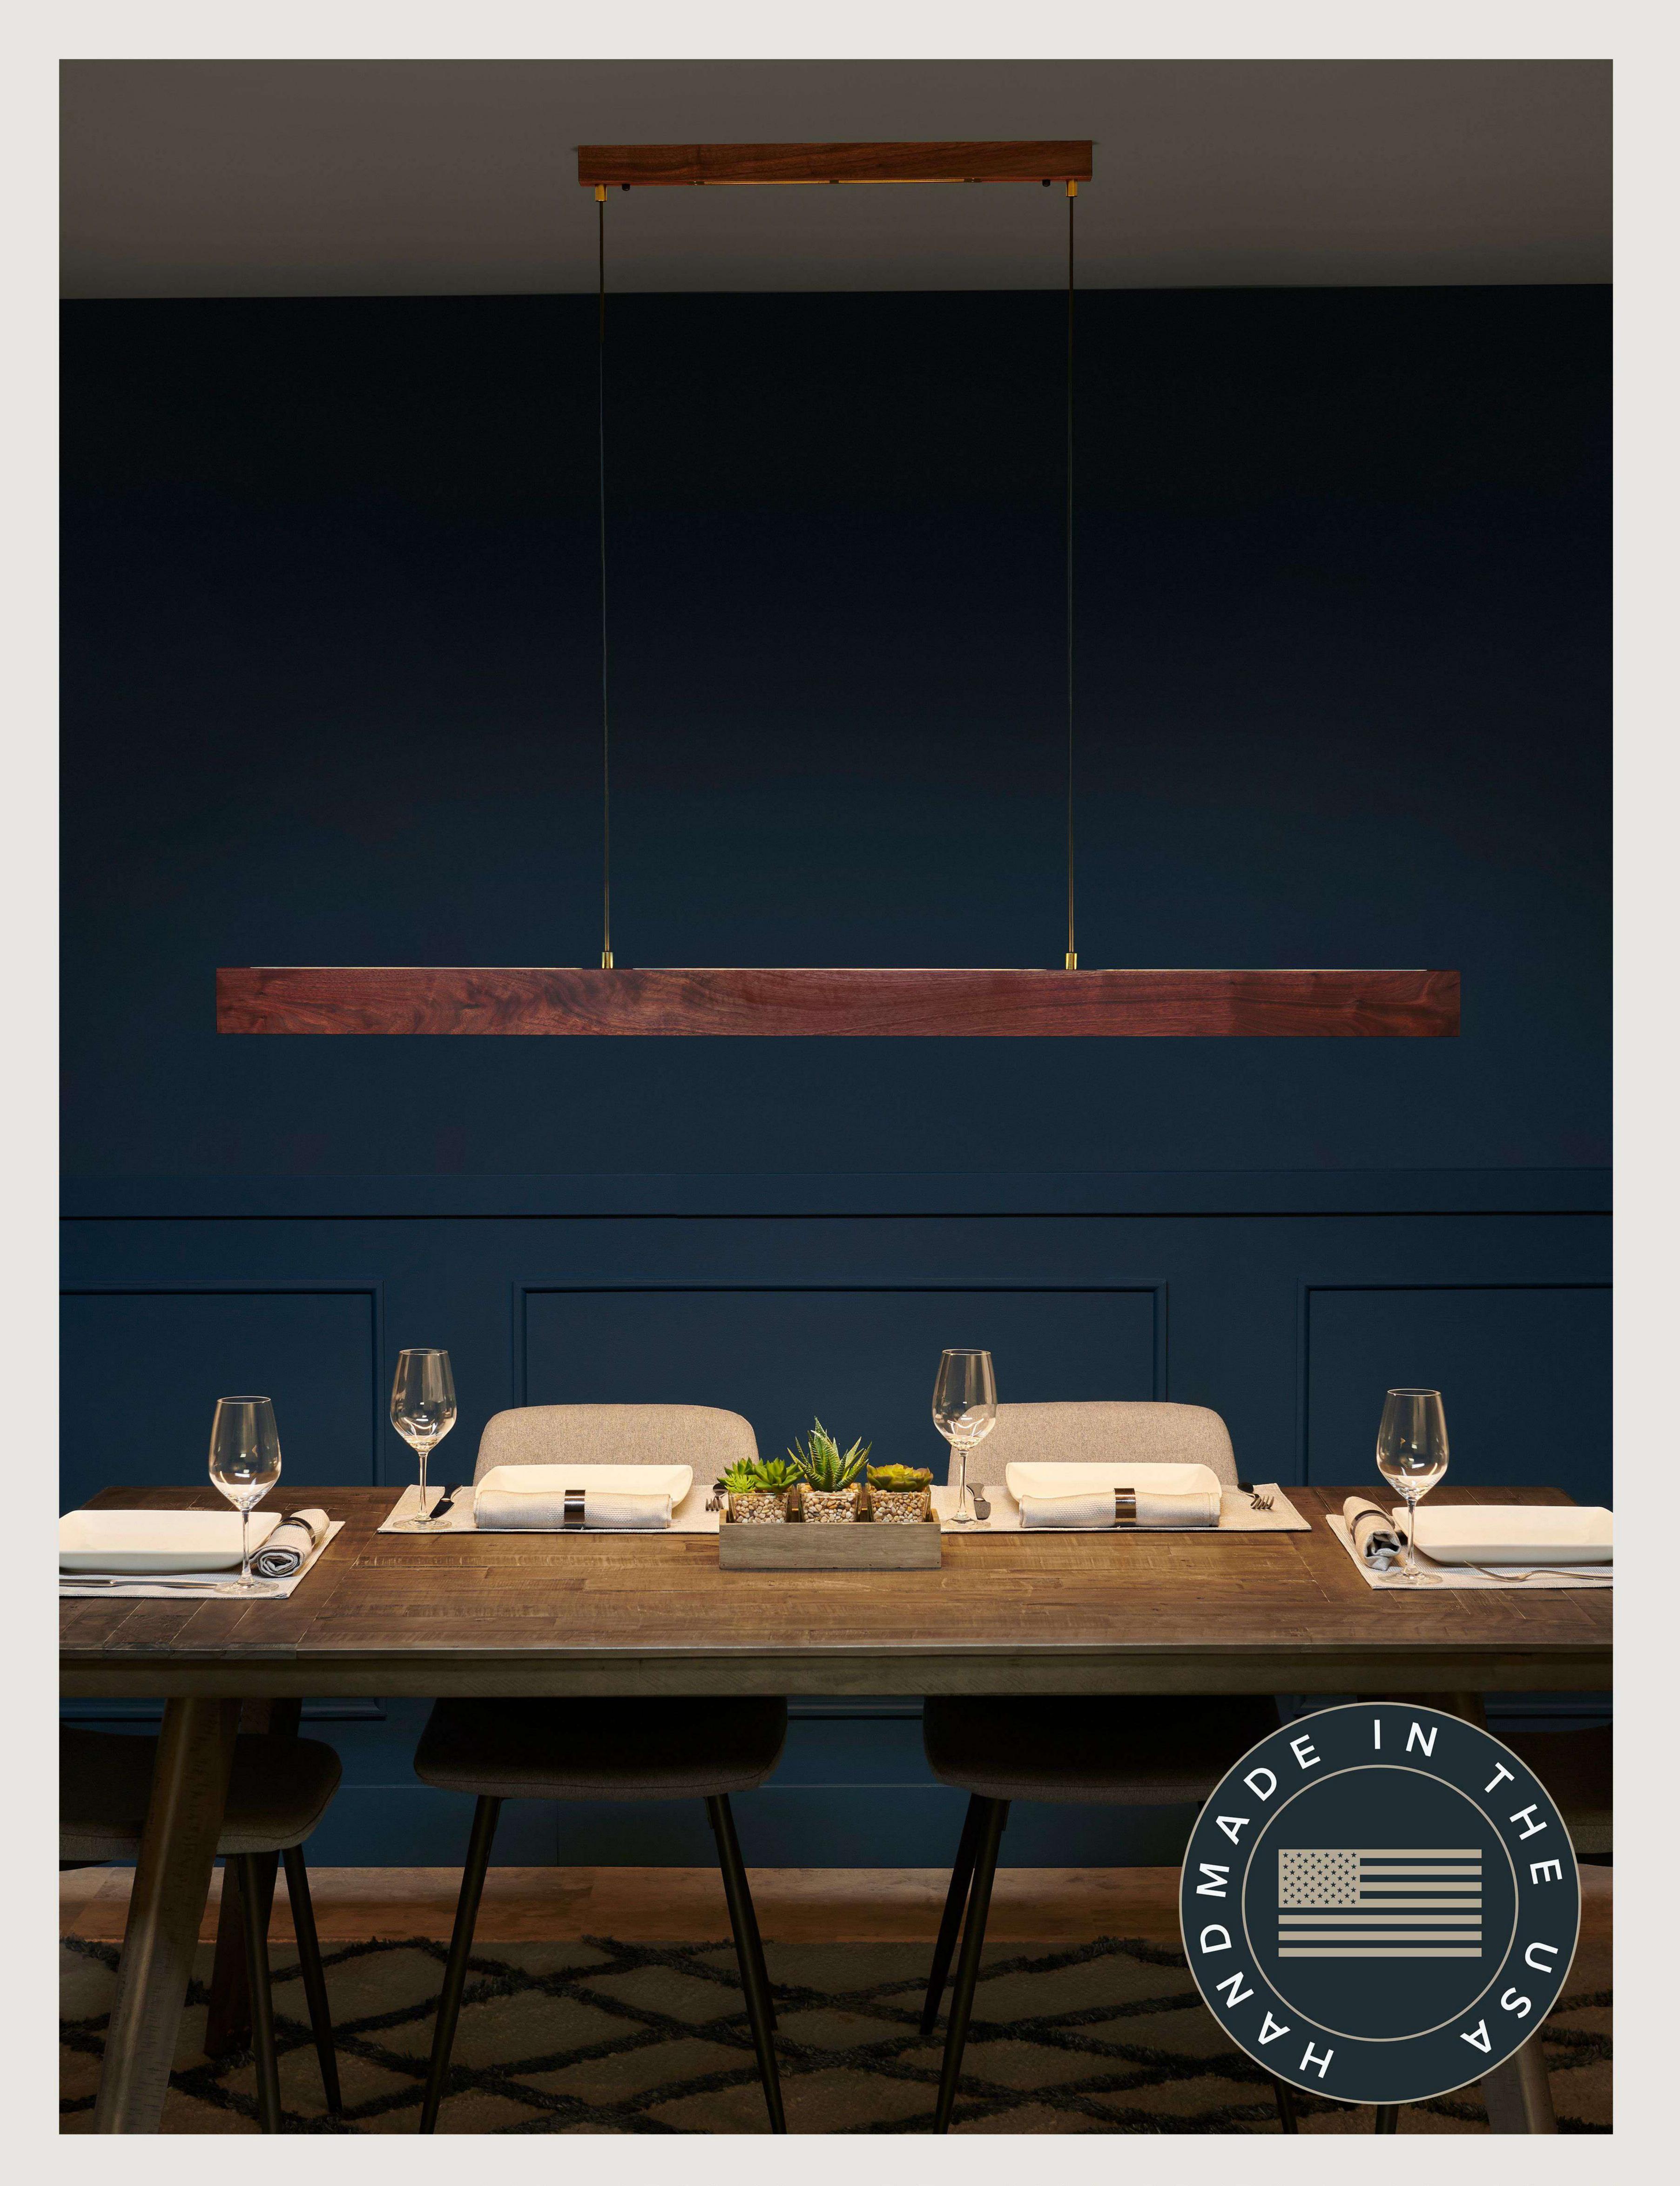



Inspect Contents

NÖRSKN



Lamp body





Terminology & Tools


NÖRSKN



Drill (Not Included)



6mm / 0.25" Drill Bit (Not Included)

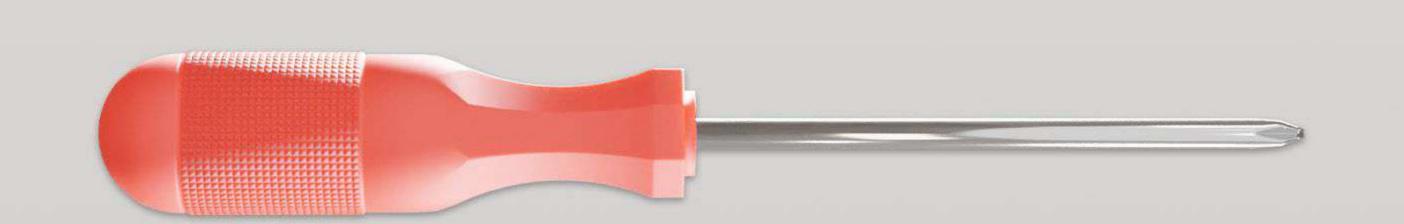

Phillip Screw Driver (Not Included)





Junction Box (Not Included)



Place the mounting bracket over the junction box in the orientation you'd like the fixture to hang. Mark four mounting locations using the bracket as a guide. Holes to be used for mounting are depicted below.

Note: If possible ensure that the holes closest to either end are utilized for mounting.

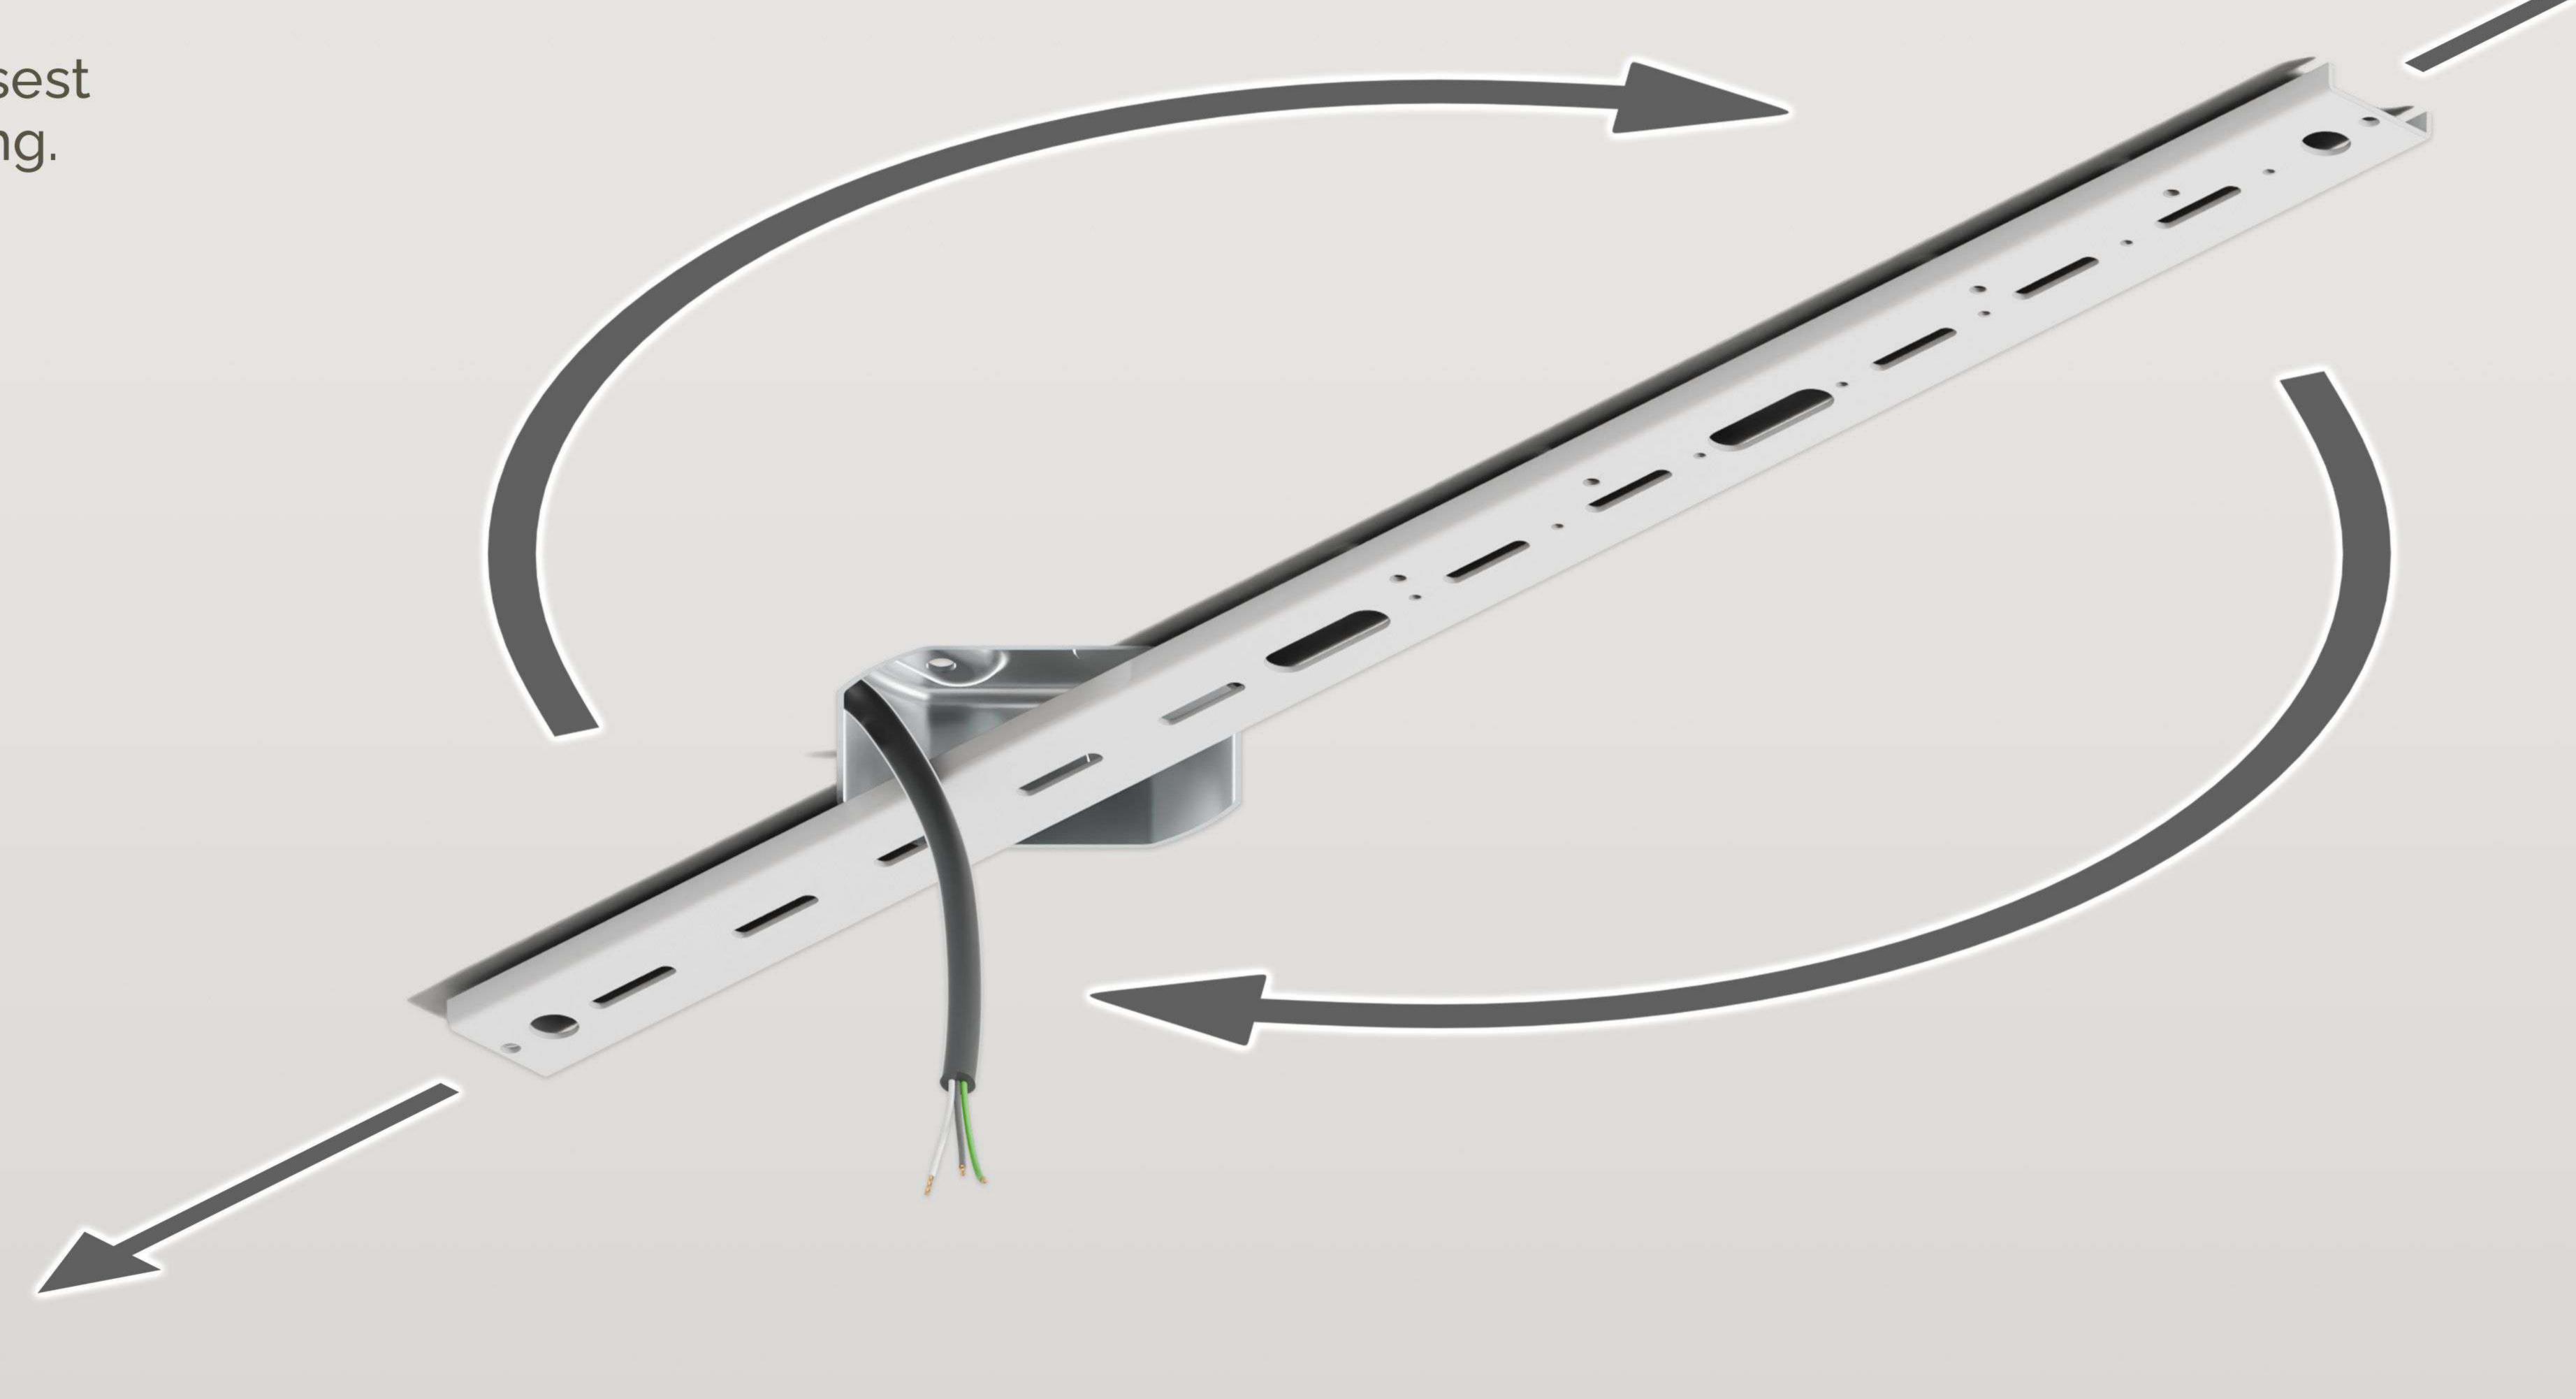

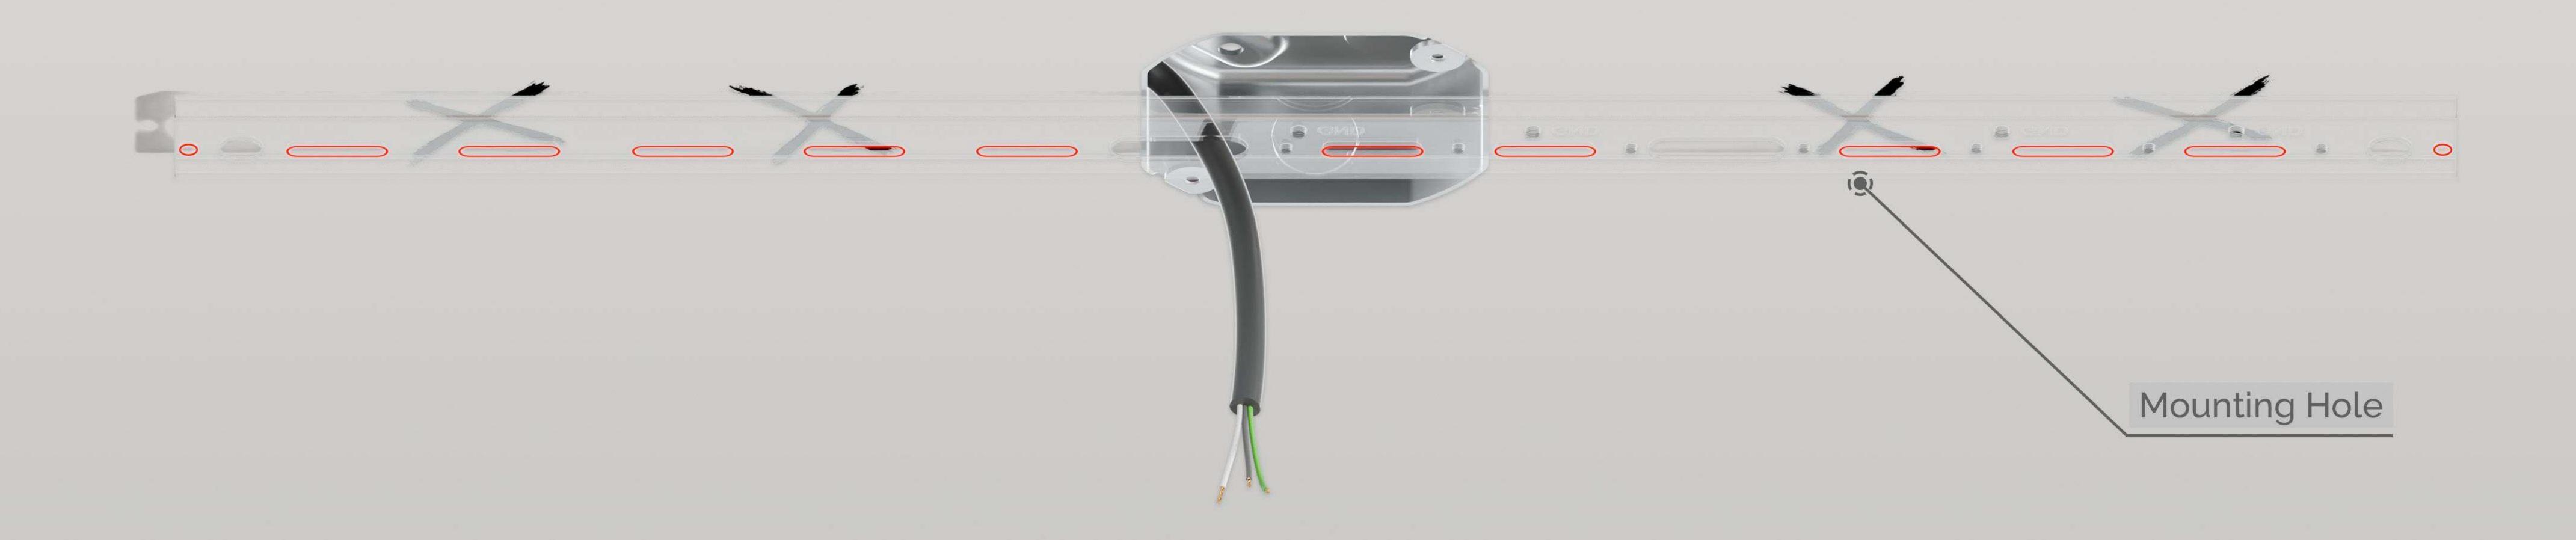




Using a 6mm (0.25") drill bit, predrill a hole at each marked mounting location.





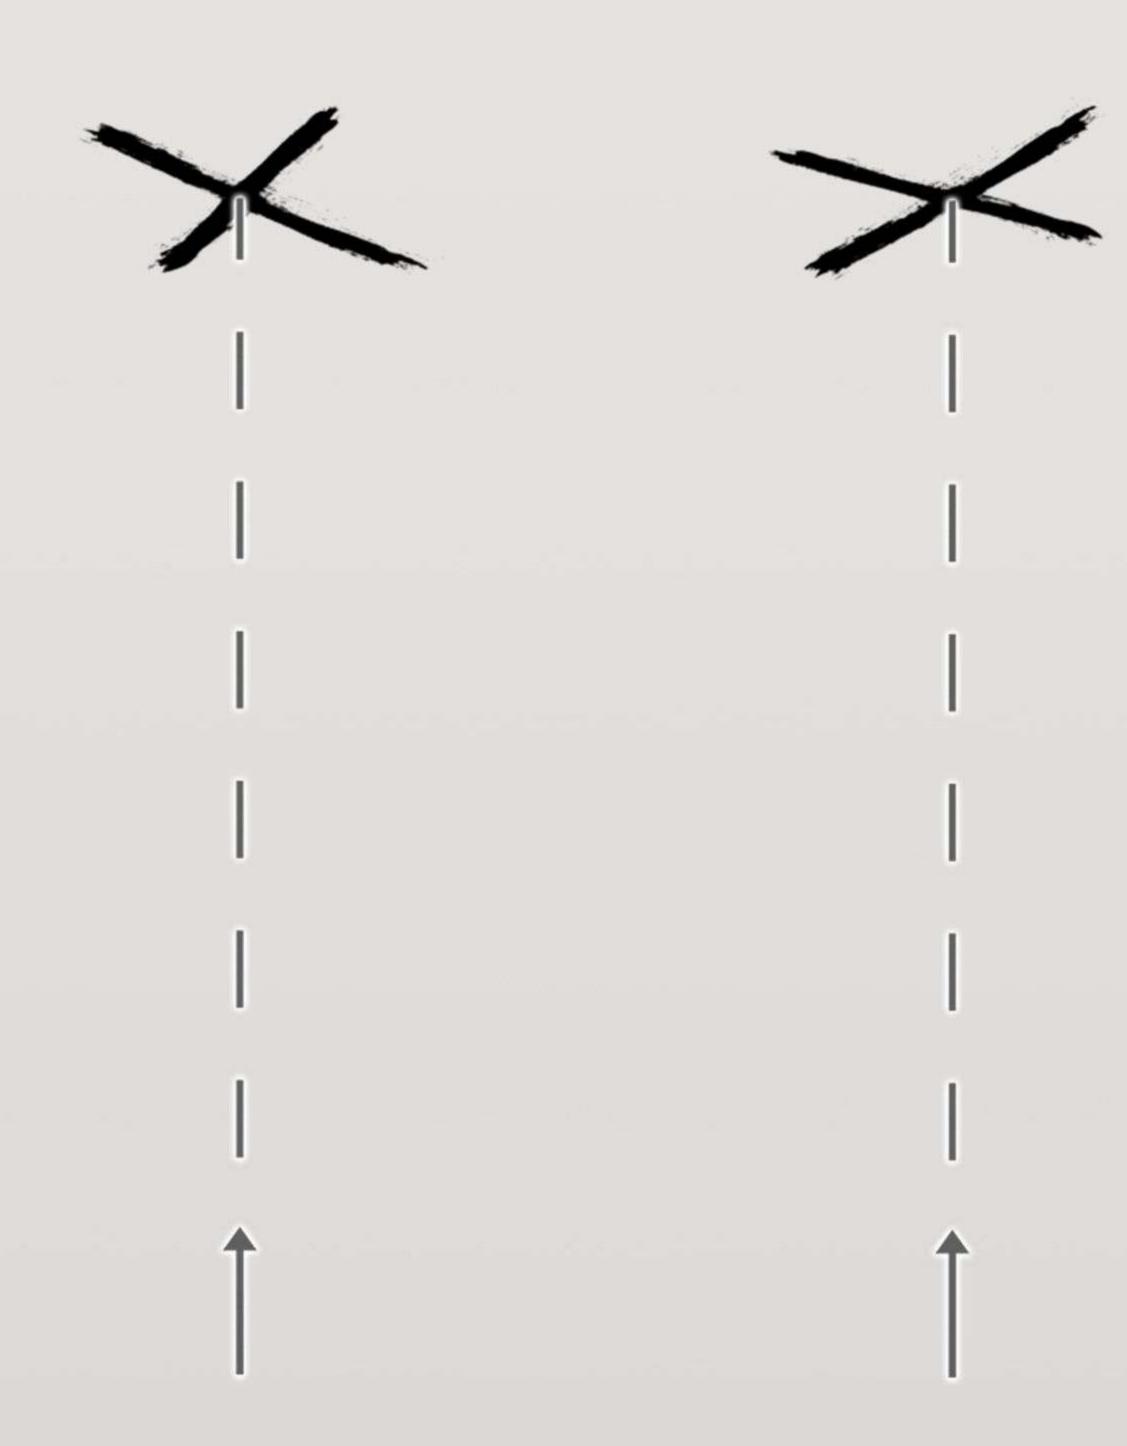





Using a Philips screwdriver, screw one drywall anchor into each previously drilled mounting location. Ensure the drywall anchor is screwed in until flush with the drywall surface.

Note: Other commercially available anchors may be used. If using anchors not provided, ensure they allow for a minimum of a 30 lb load capacity each.

Note: If installing in other surfaces than drywall, ensure the anchor points can support a minimum of 30 lb each.

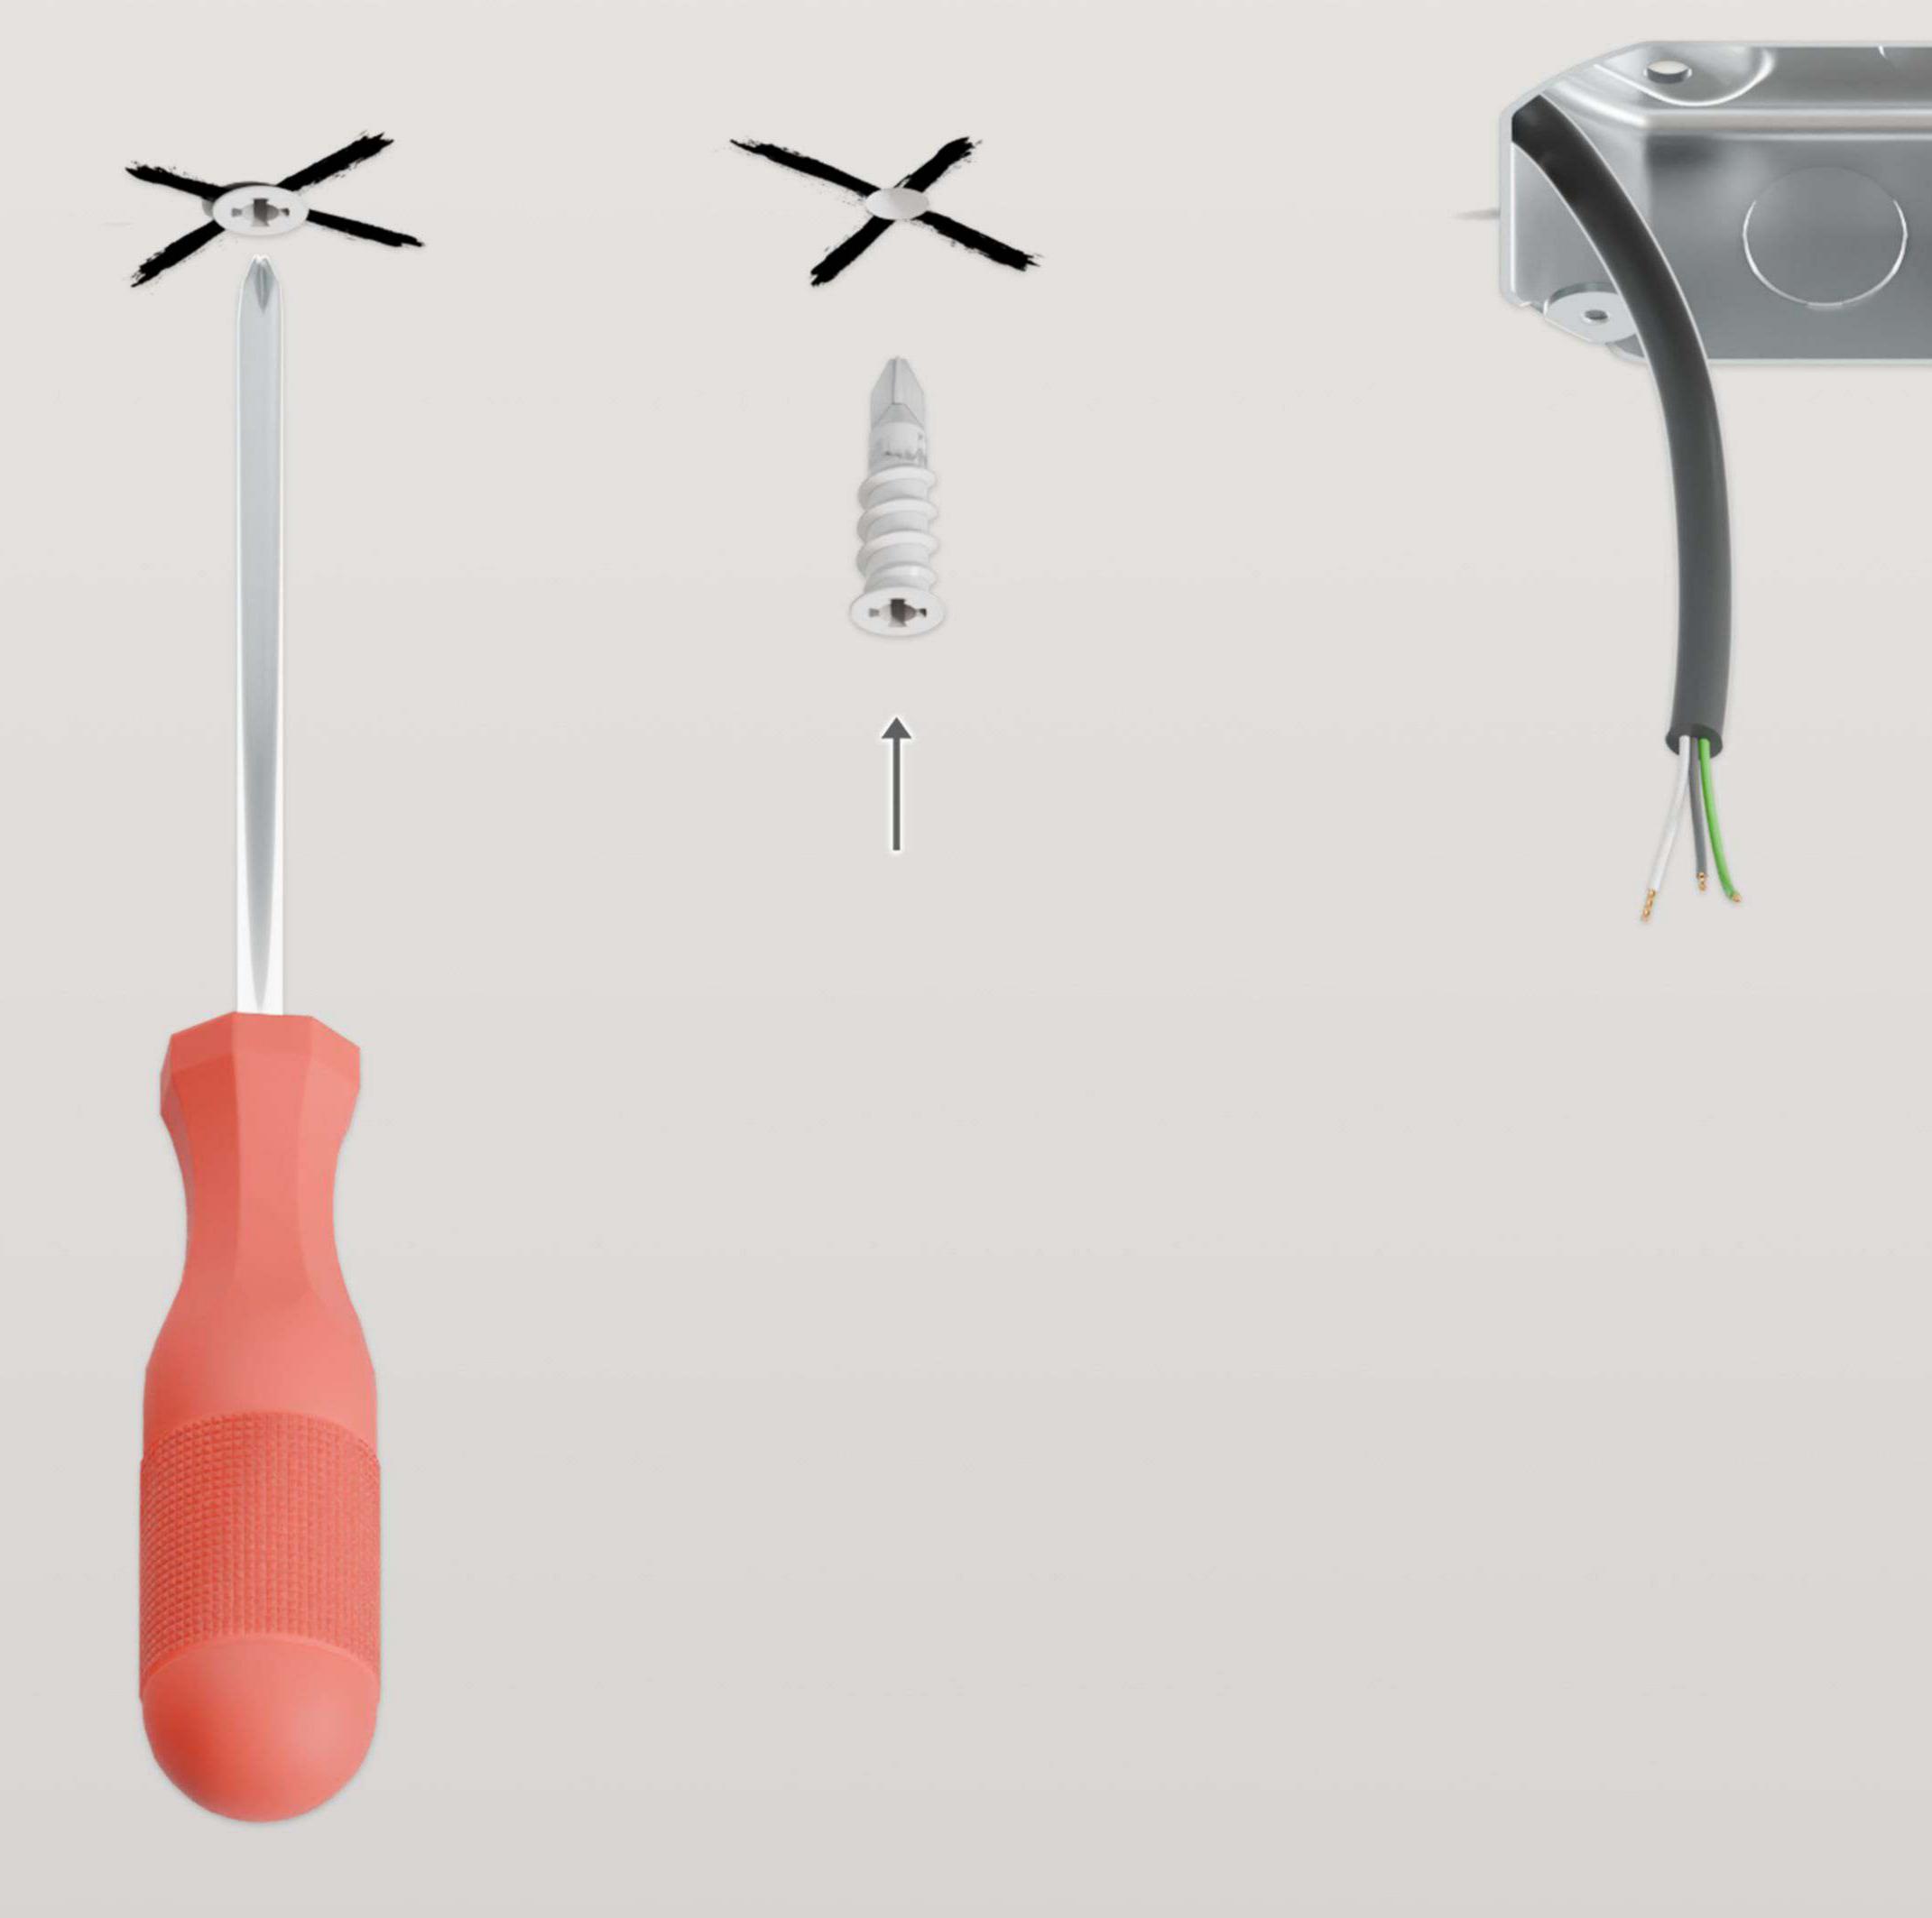

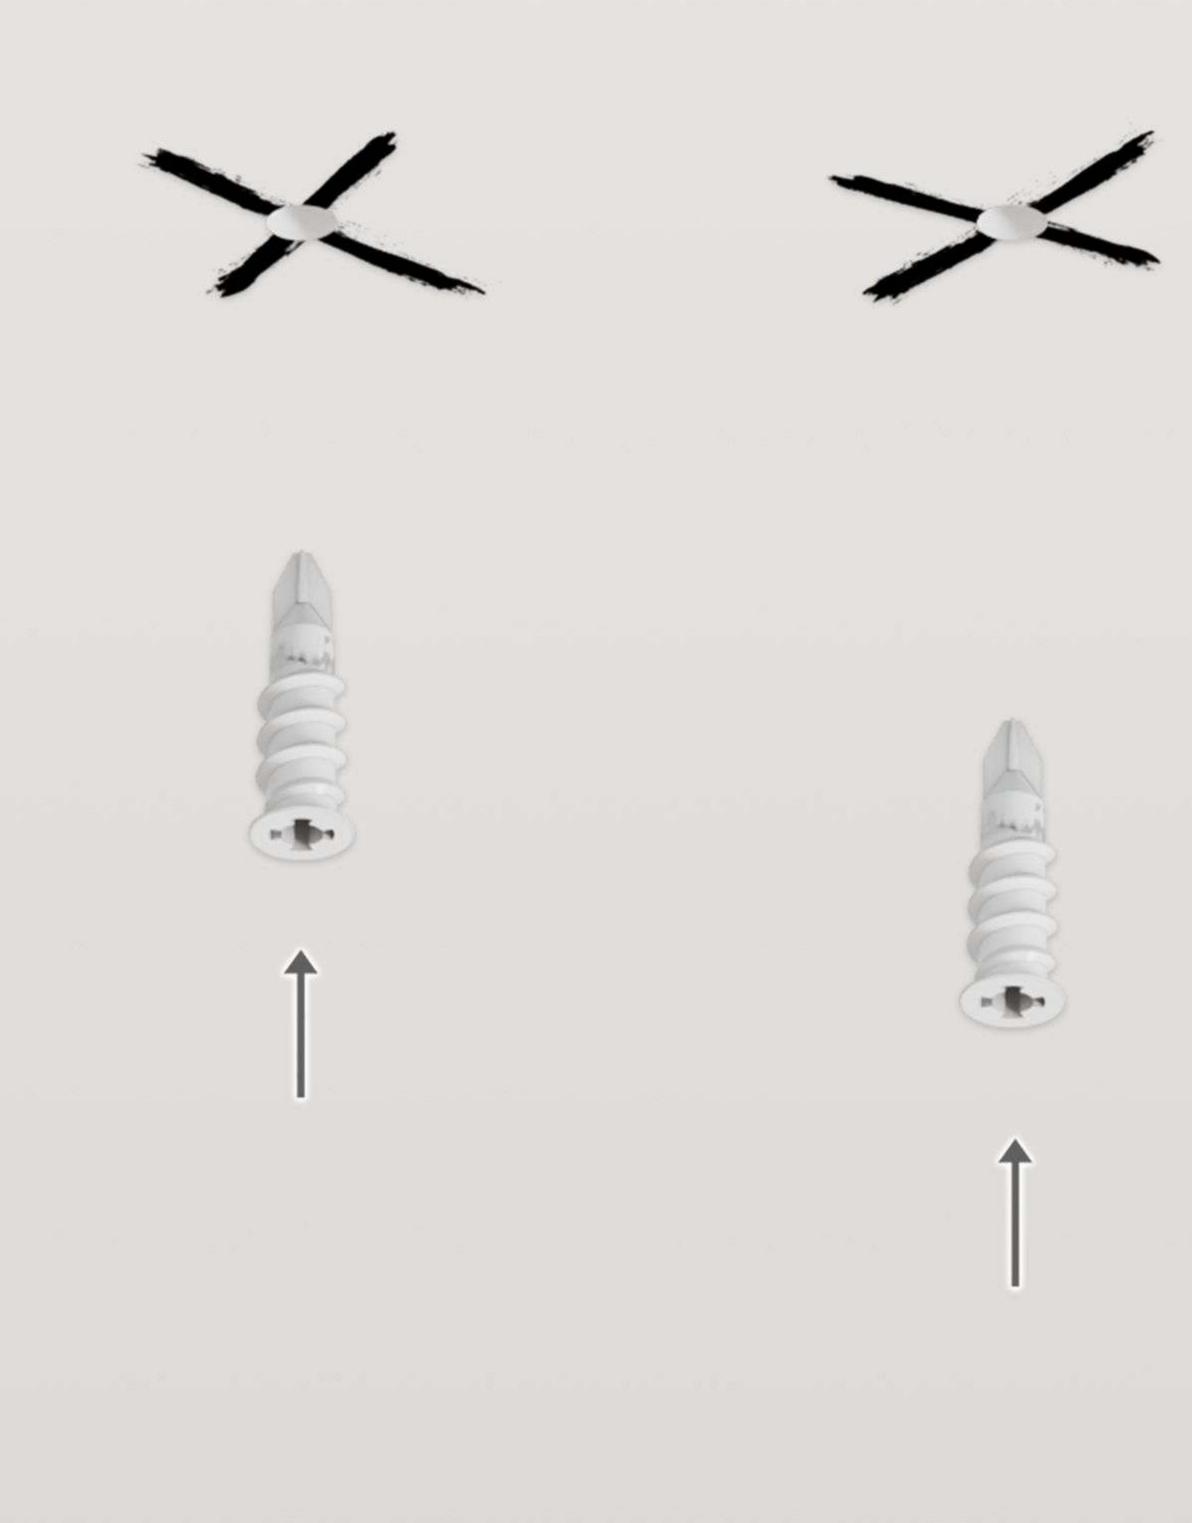





Secure the canopy cable grips to the mounting bracket with the provided M11 nuts.

Note: Ensure the cable grip slots are oriented inline with the length of the mounting bracket.

Note: Ensure the mounting bracket and canopy cable grips are oriented as depicted in the install guide.

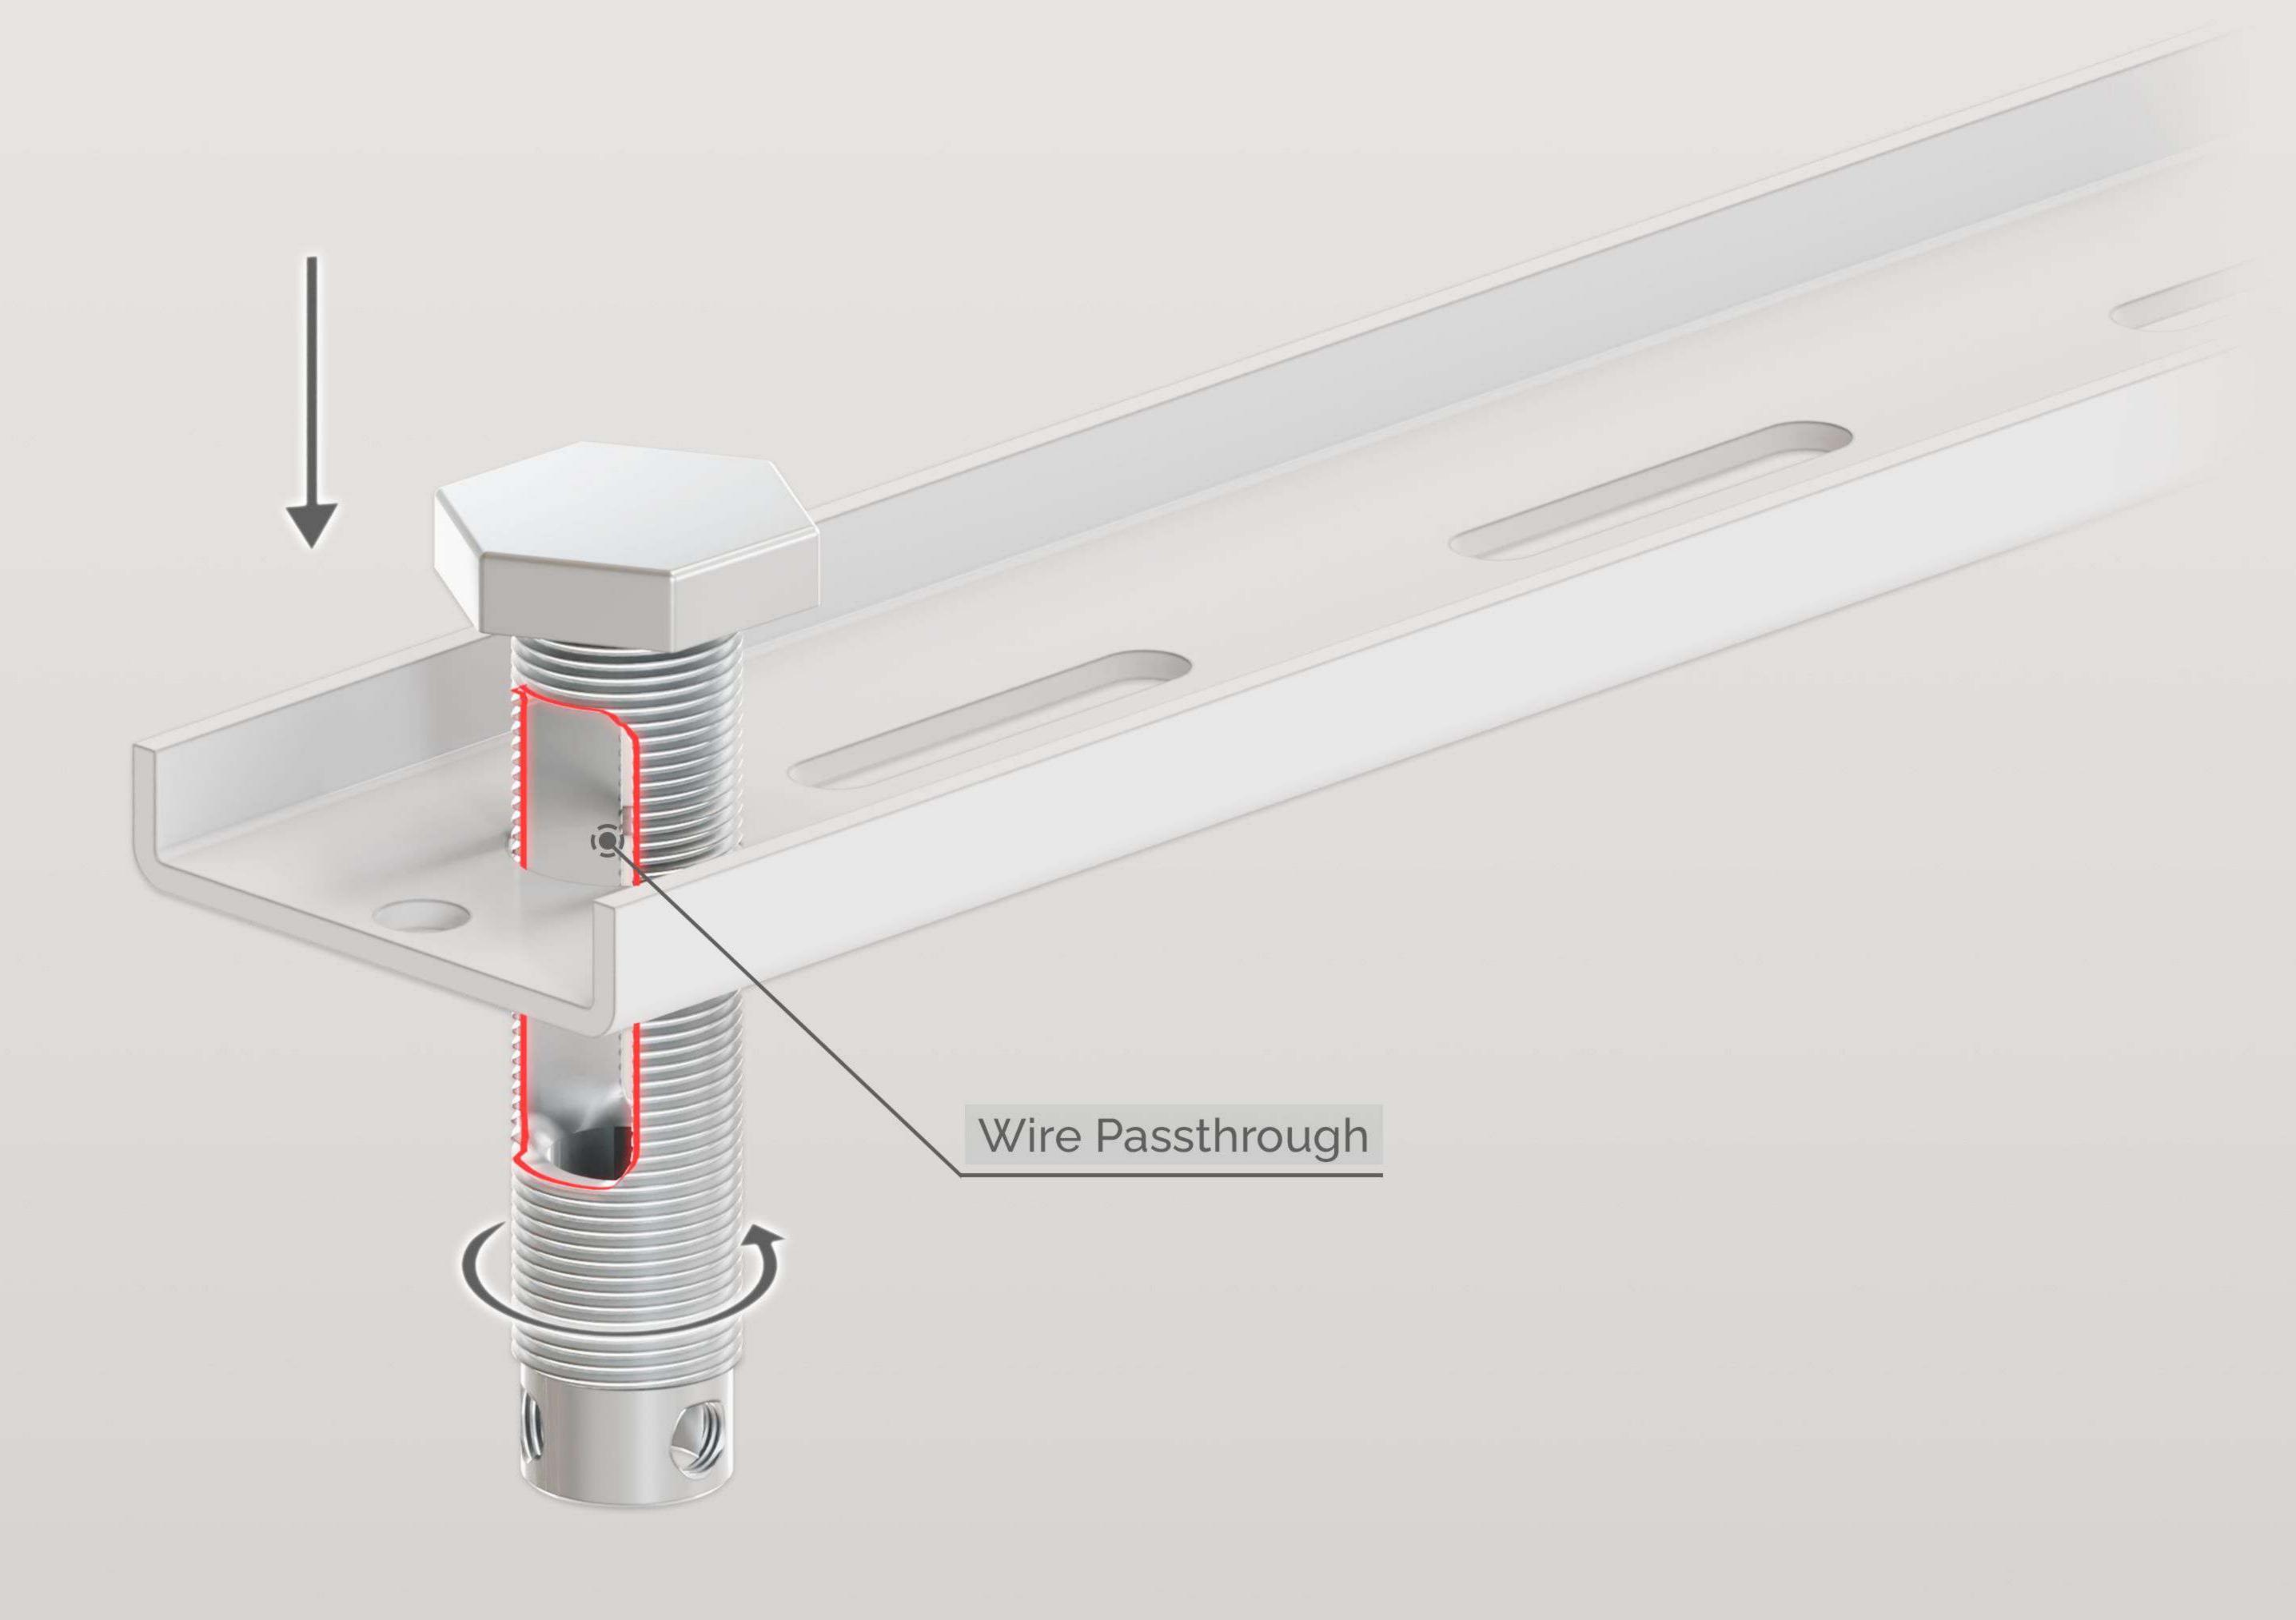


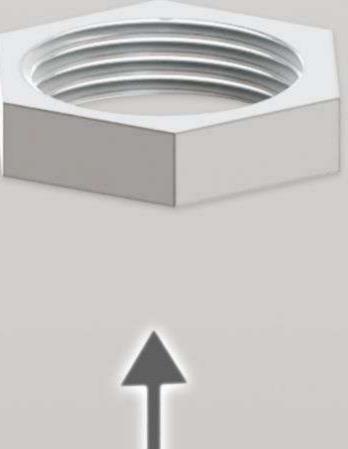



Secure the ground wire to the mounting bracket with the provided ground screw. Four grounding locations exist on the mounting bracket and are marked with GND.


Note: Ensure the ground wire is secured as depicted in the install guide.

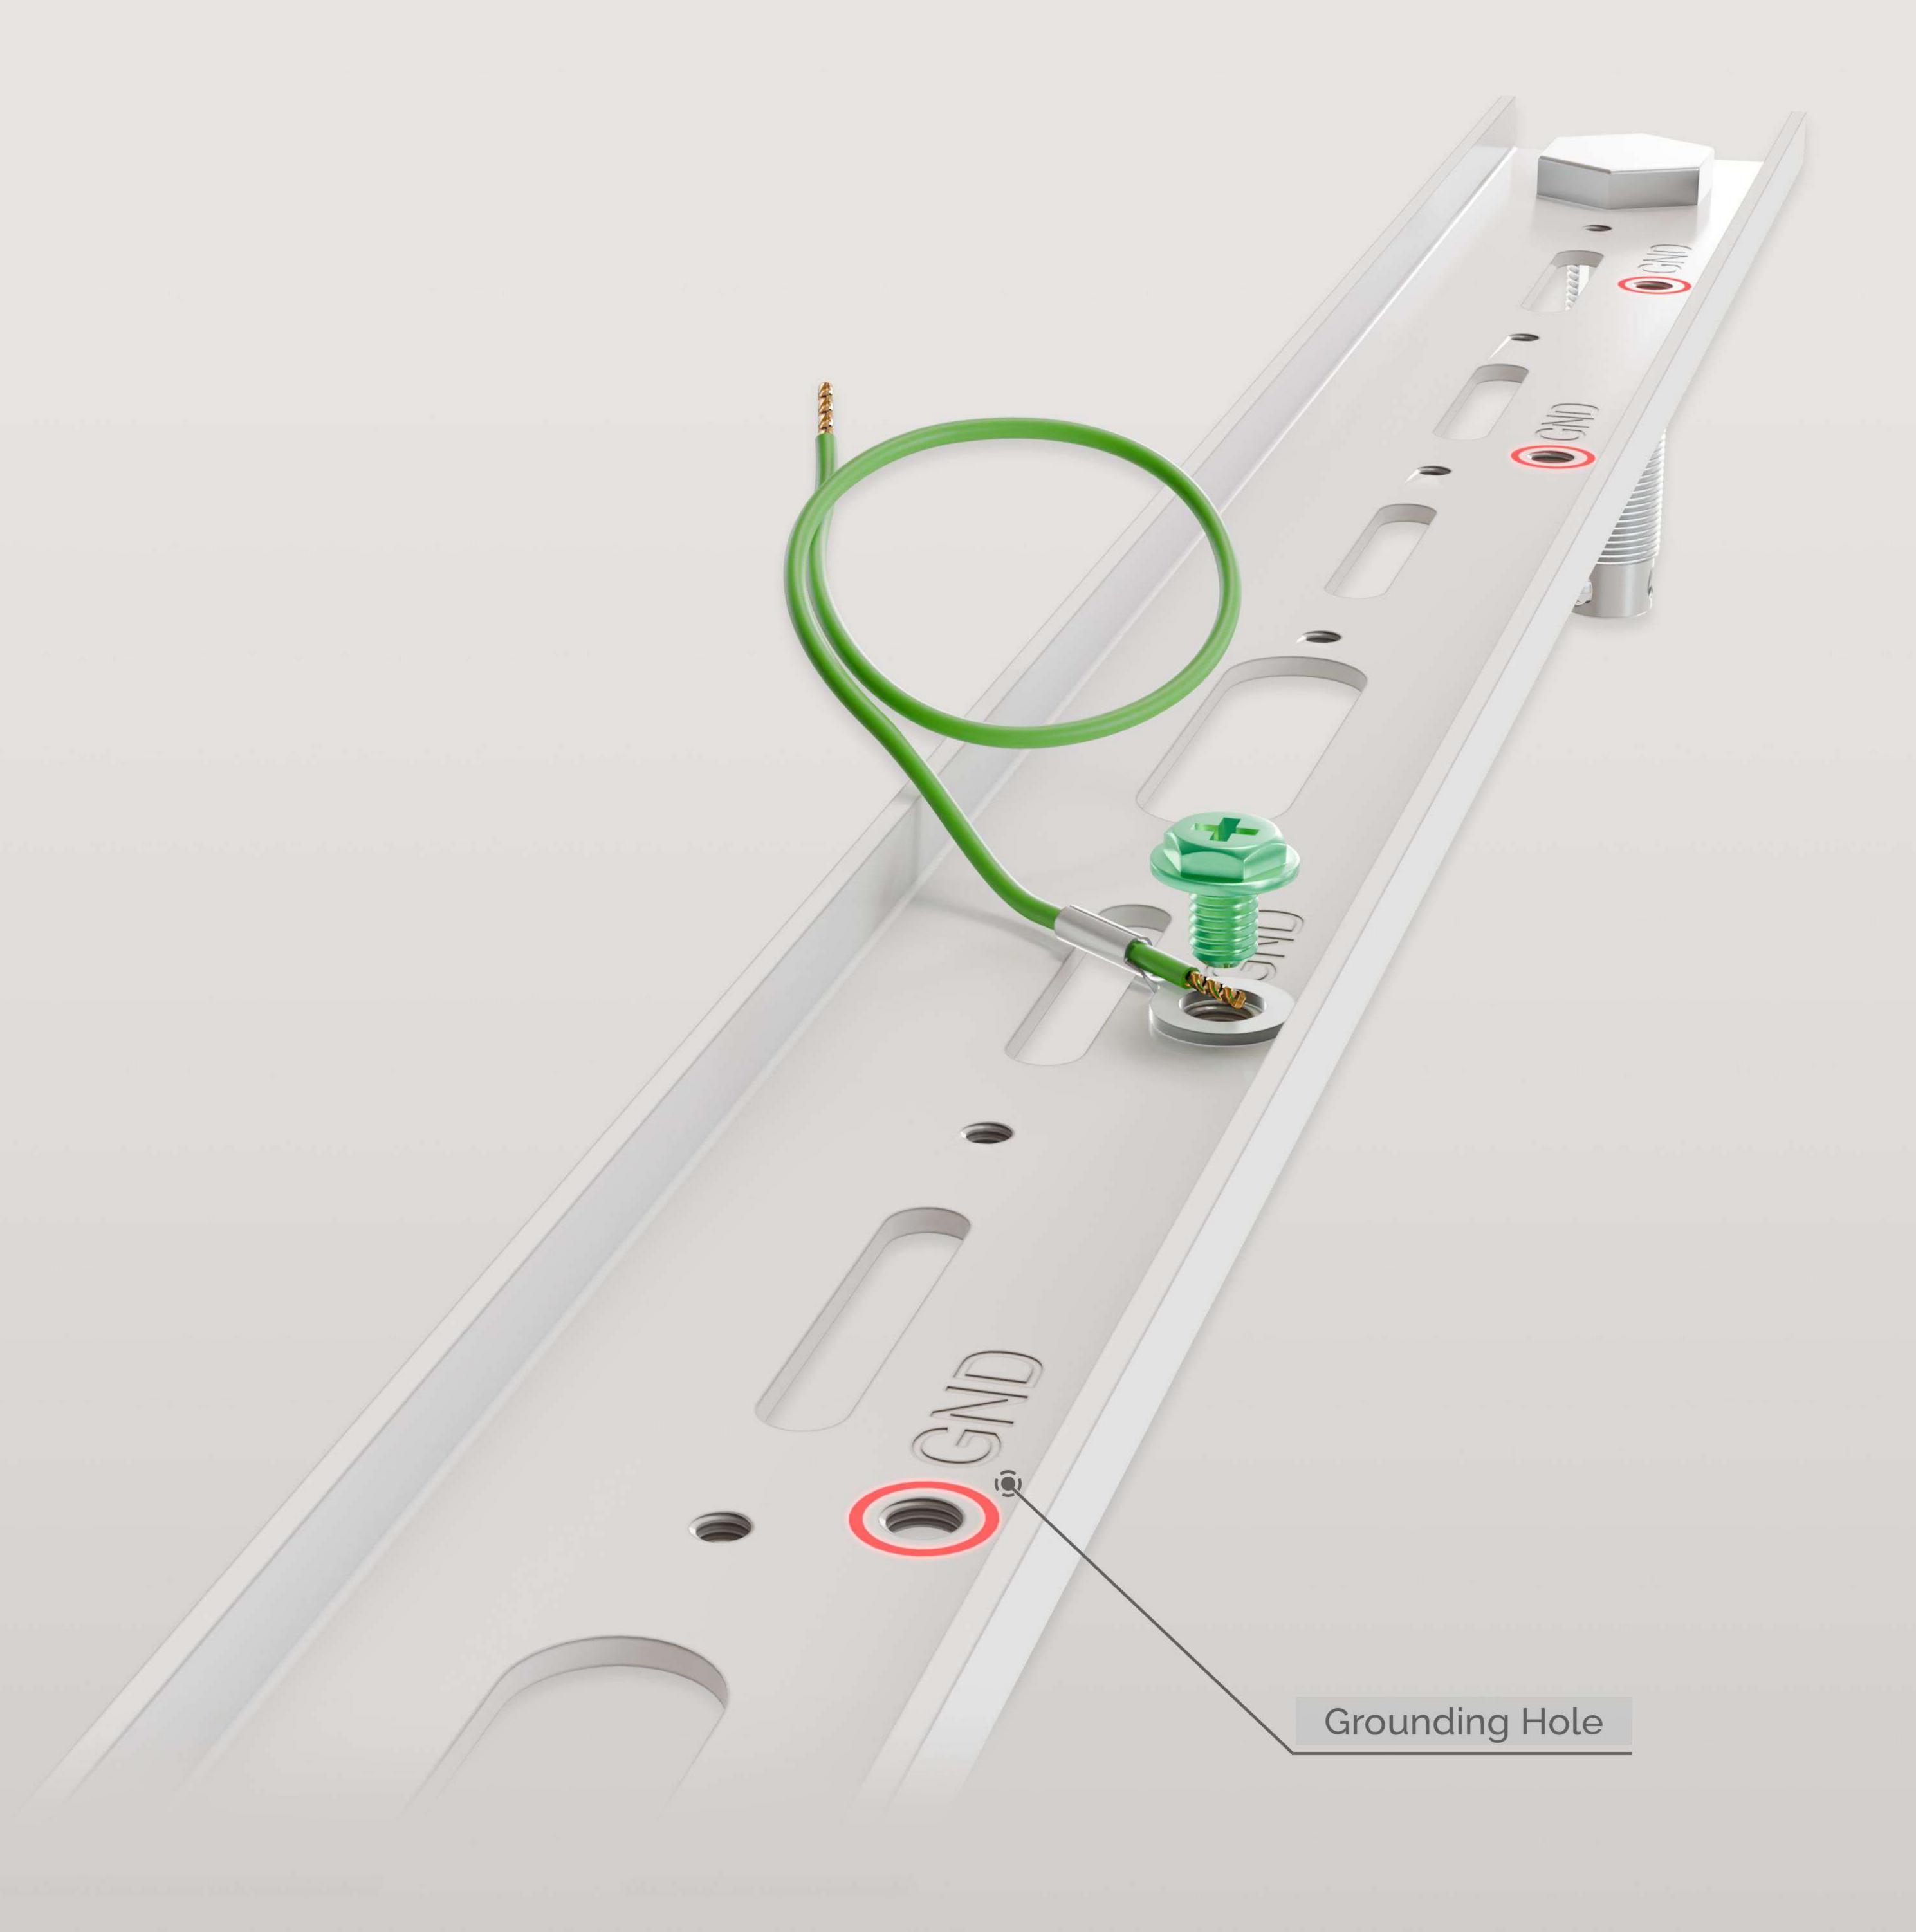




Thread the driver power cord through the mounting bracket at one of the two wire passage holes.

Note: Ensure to use a wire passage hole on the mounting bracket that will not be located directly beneath the junction box when the mounting bracket is mounted.

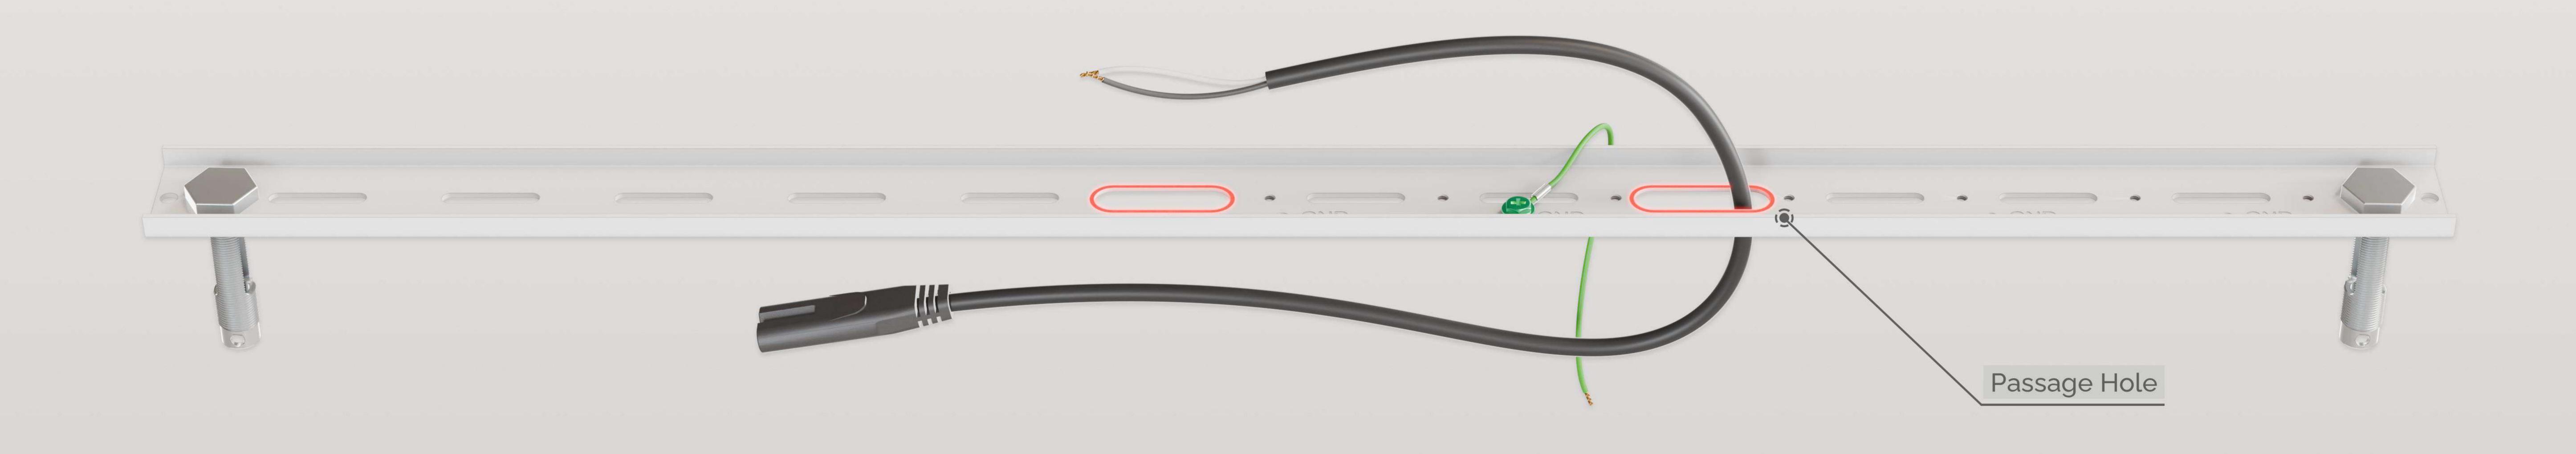



Connect the ground wire from the mounting bracket to the ground wire from the junction box using a wire connector. Then, connect the wires from the driver power cord to the wires from the junction box using wire connectors.

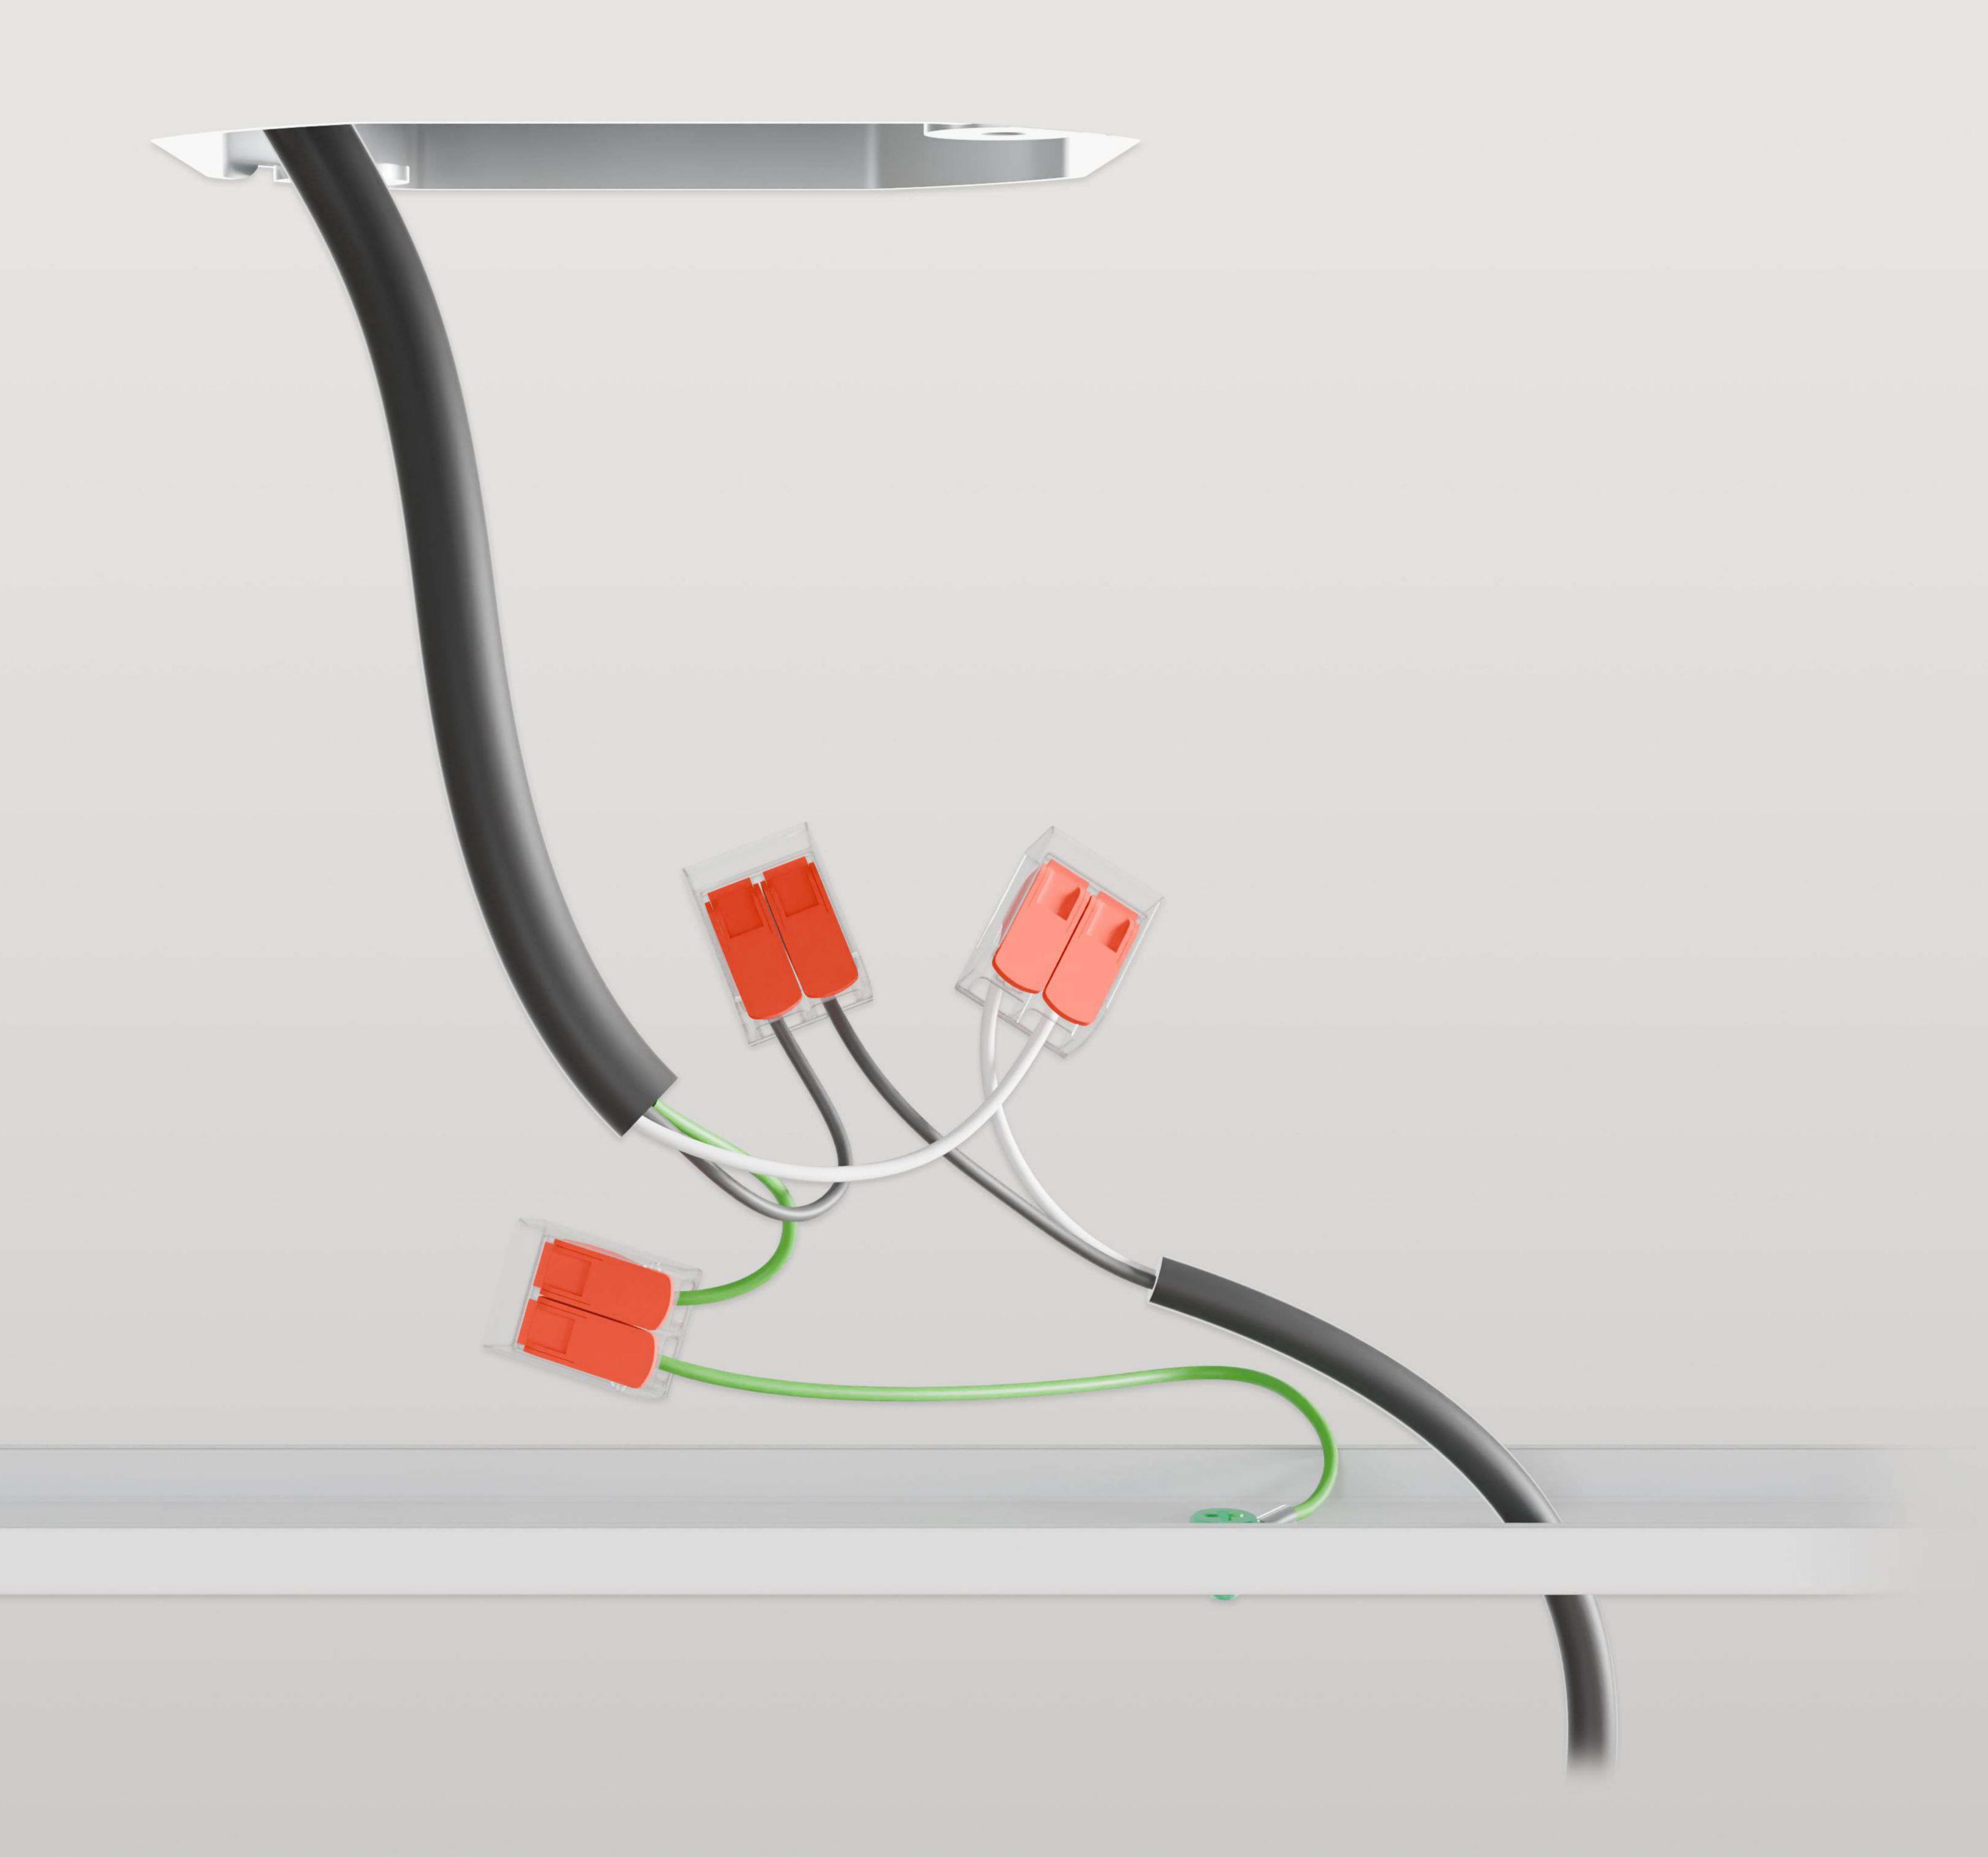




NÖRSKI

Push the mounting bracket tight against the ceiling and pull any slack out of the driver power cord. Secure the mounting bracket to the ceiling by screwing the four mounting screws into the previously placed drywall anchors.


Note: The driver power cord will route in the cavity between the ceiling and mounting bracket.

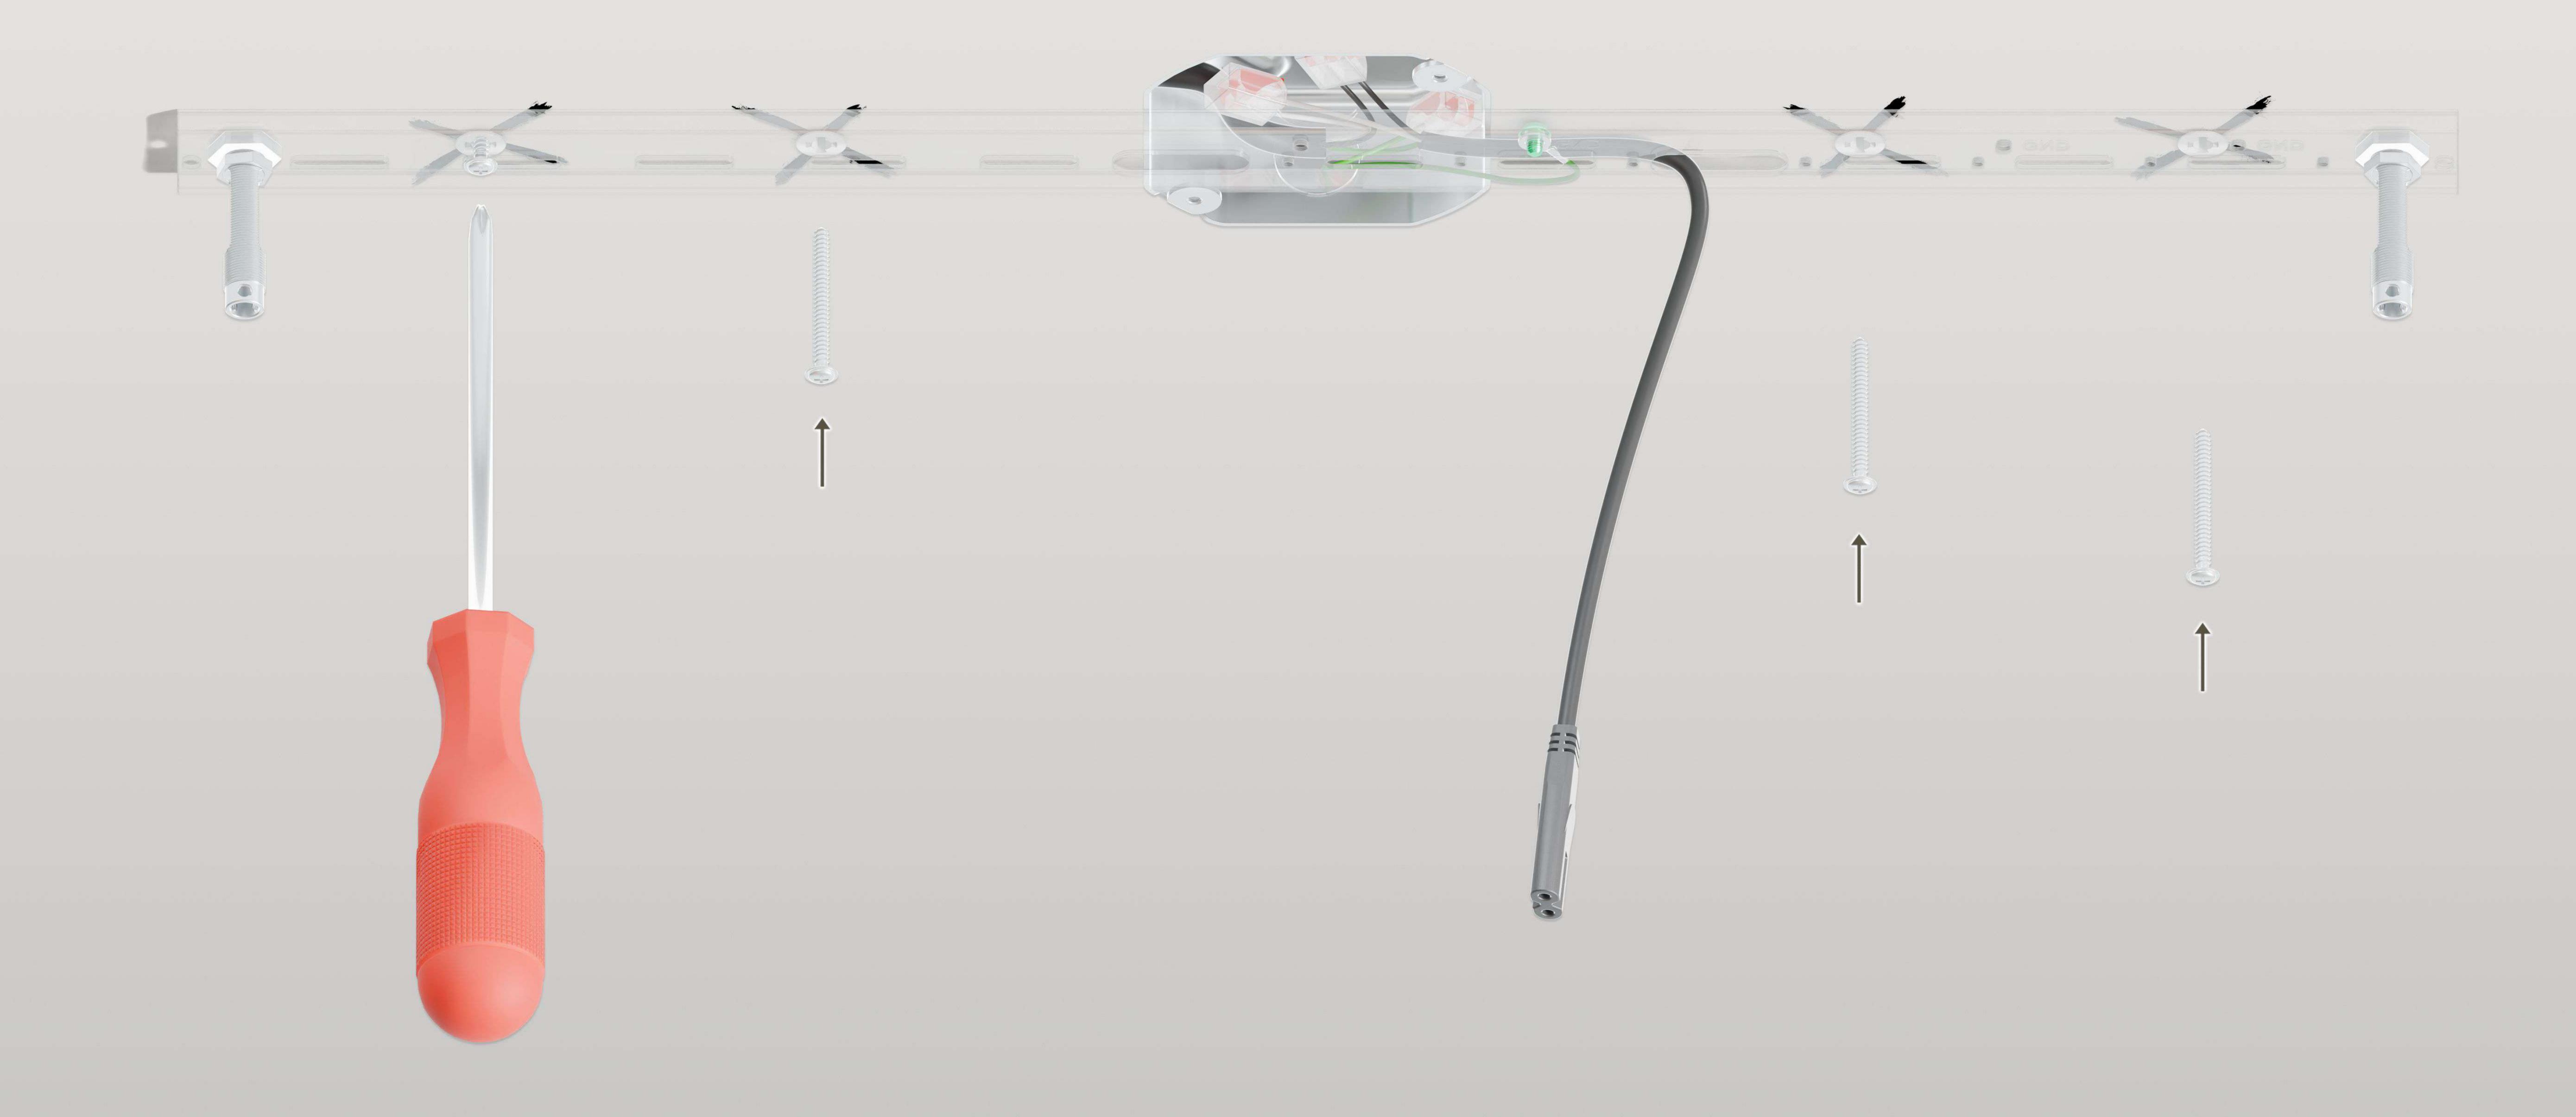



Thread one barrel onto each suspension cable.


Note: Ensure the orientation of the barrels matches the install depiction.

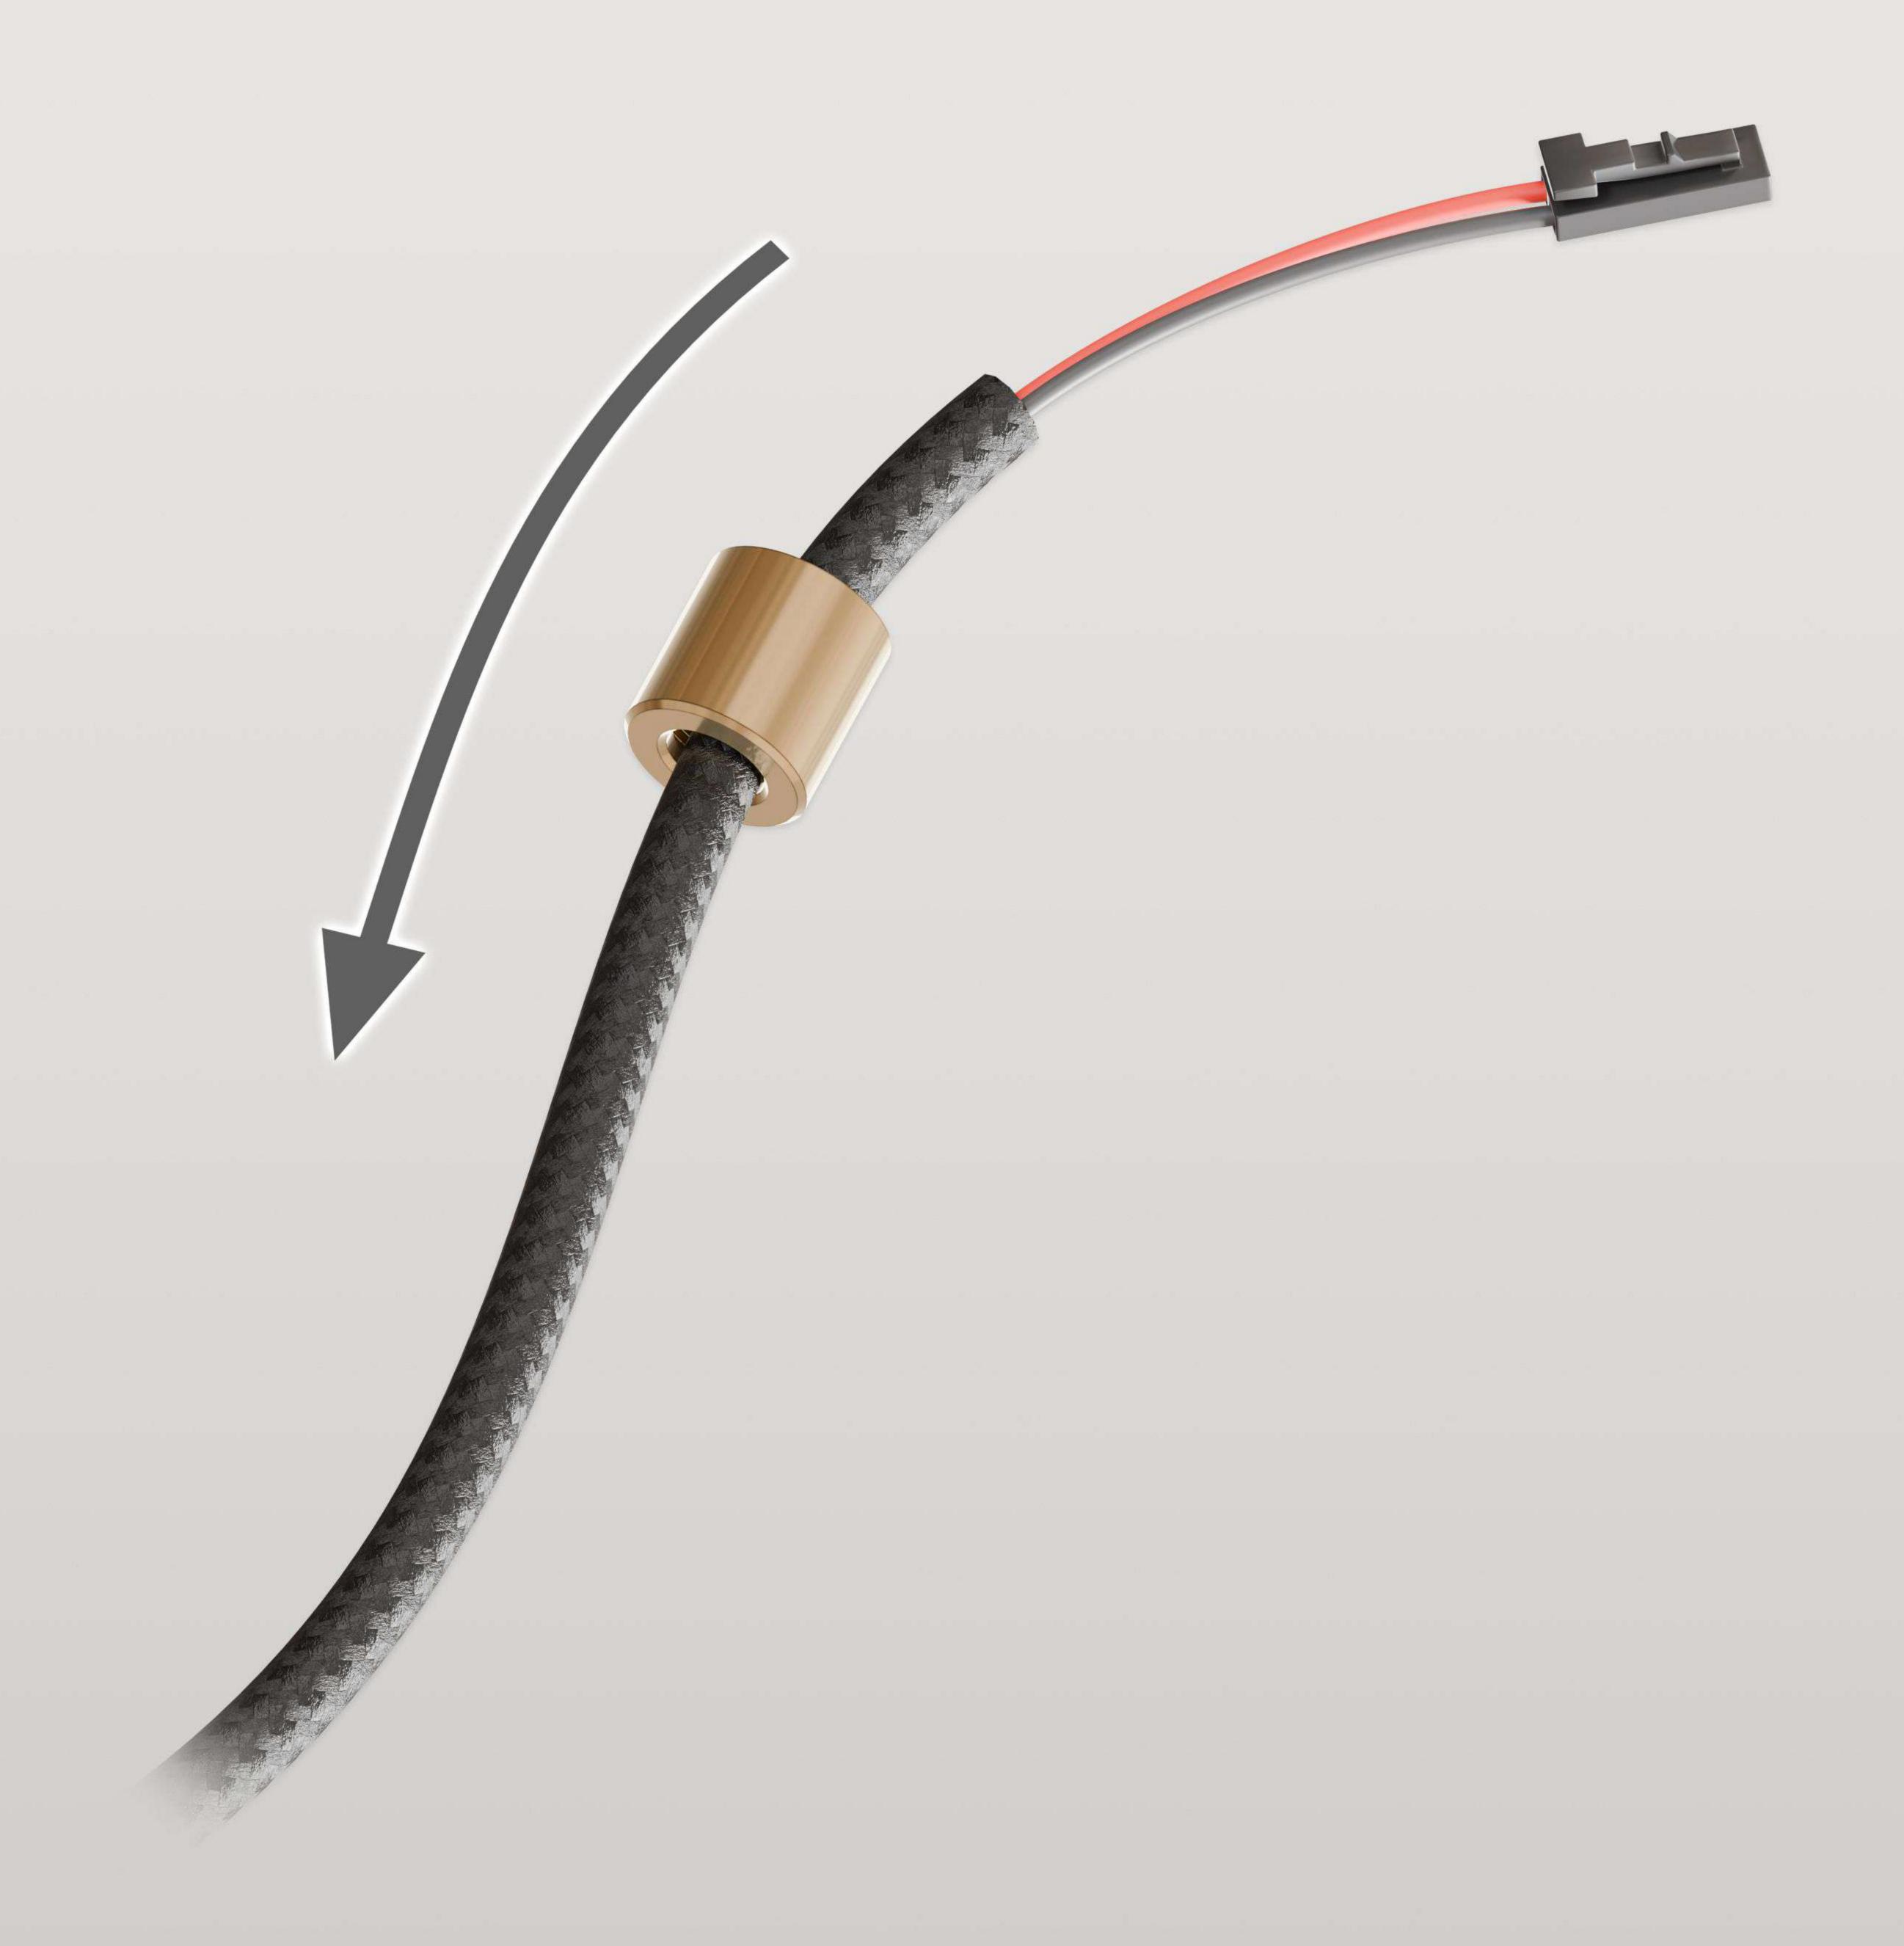



Thread the canopy onto the suspension cables and carry it down until it is resting on the fixture body.



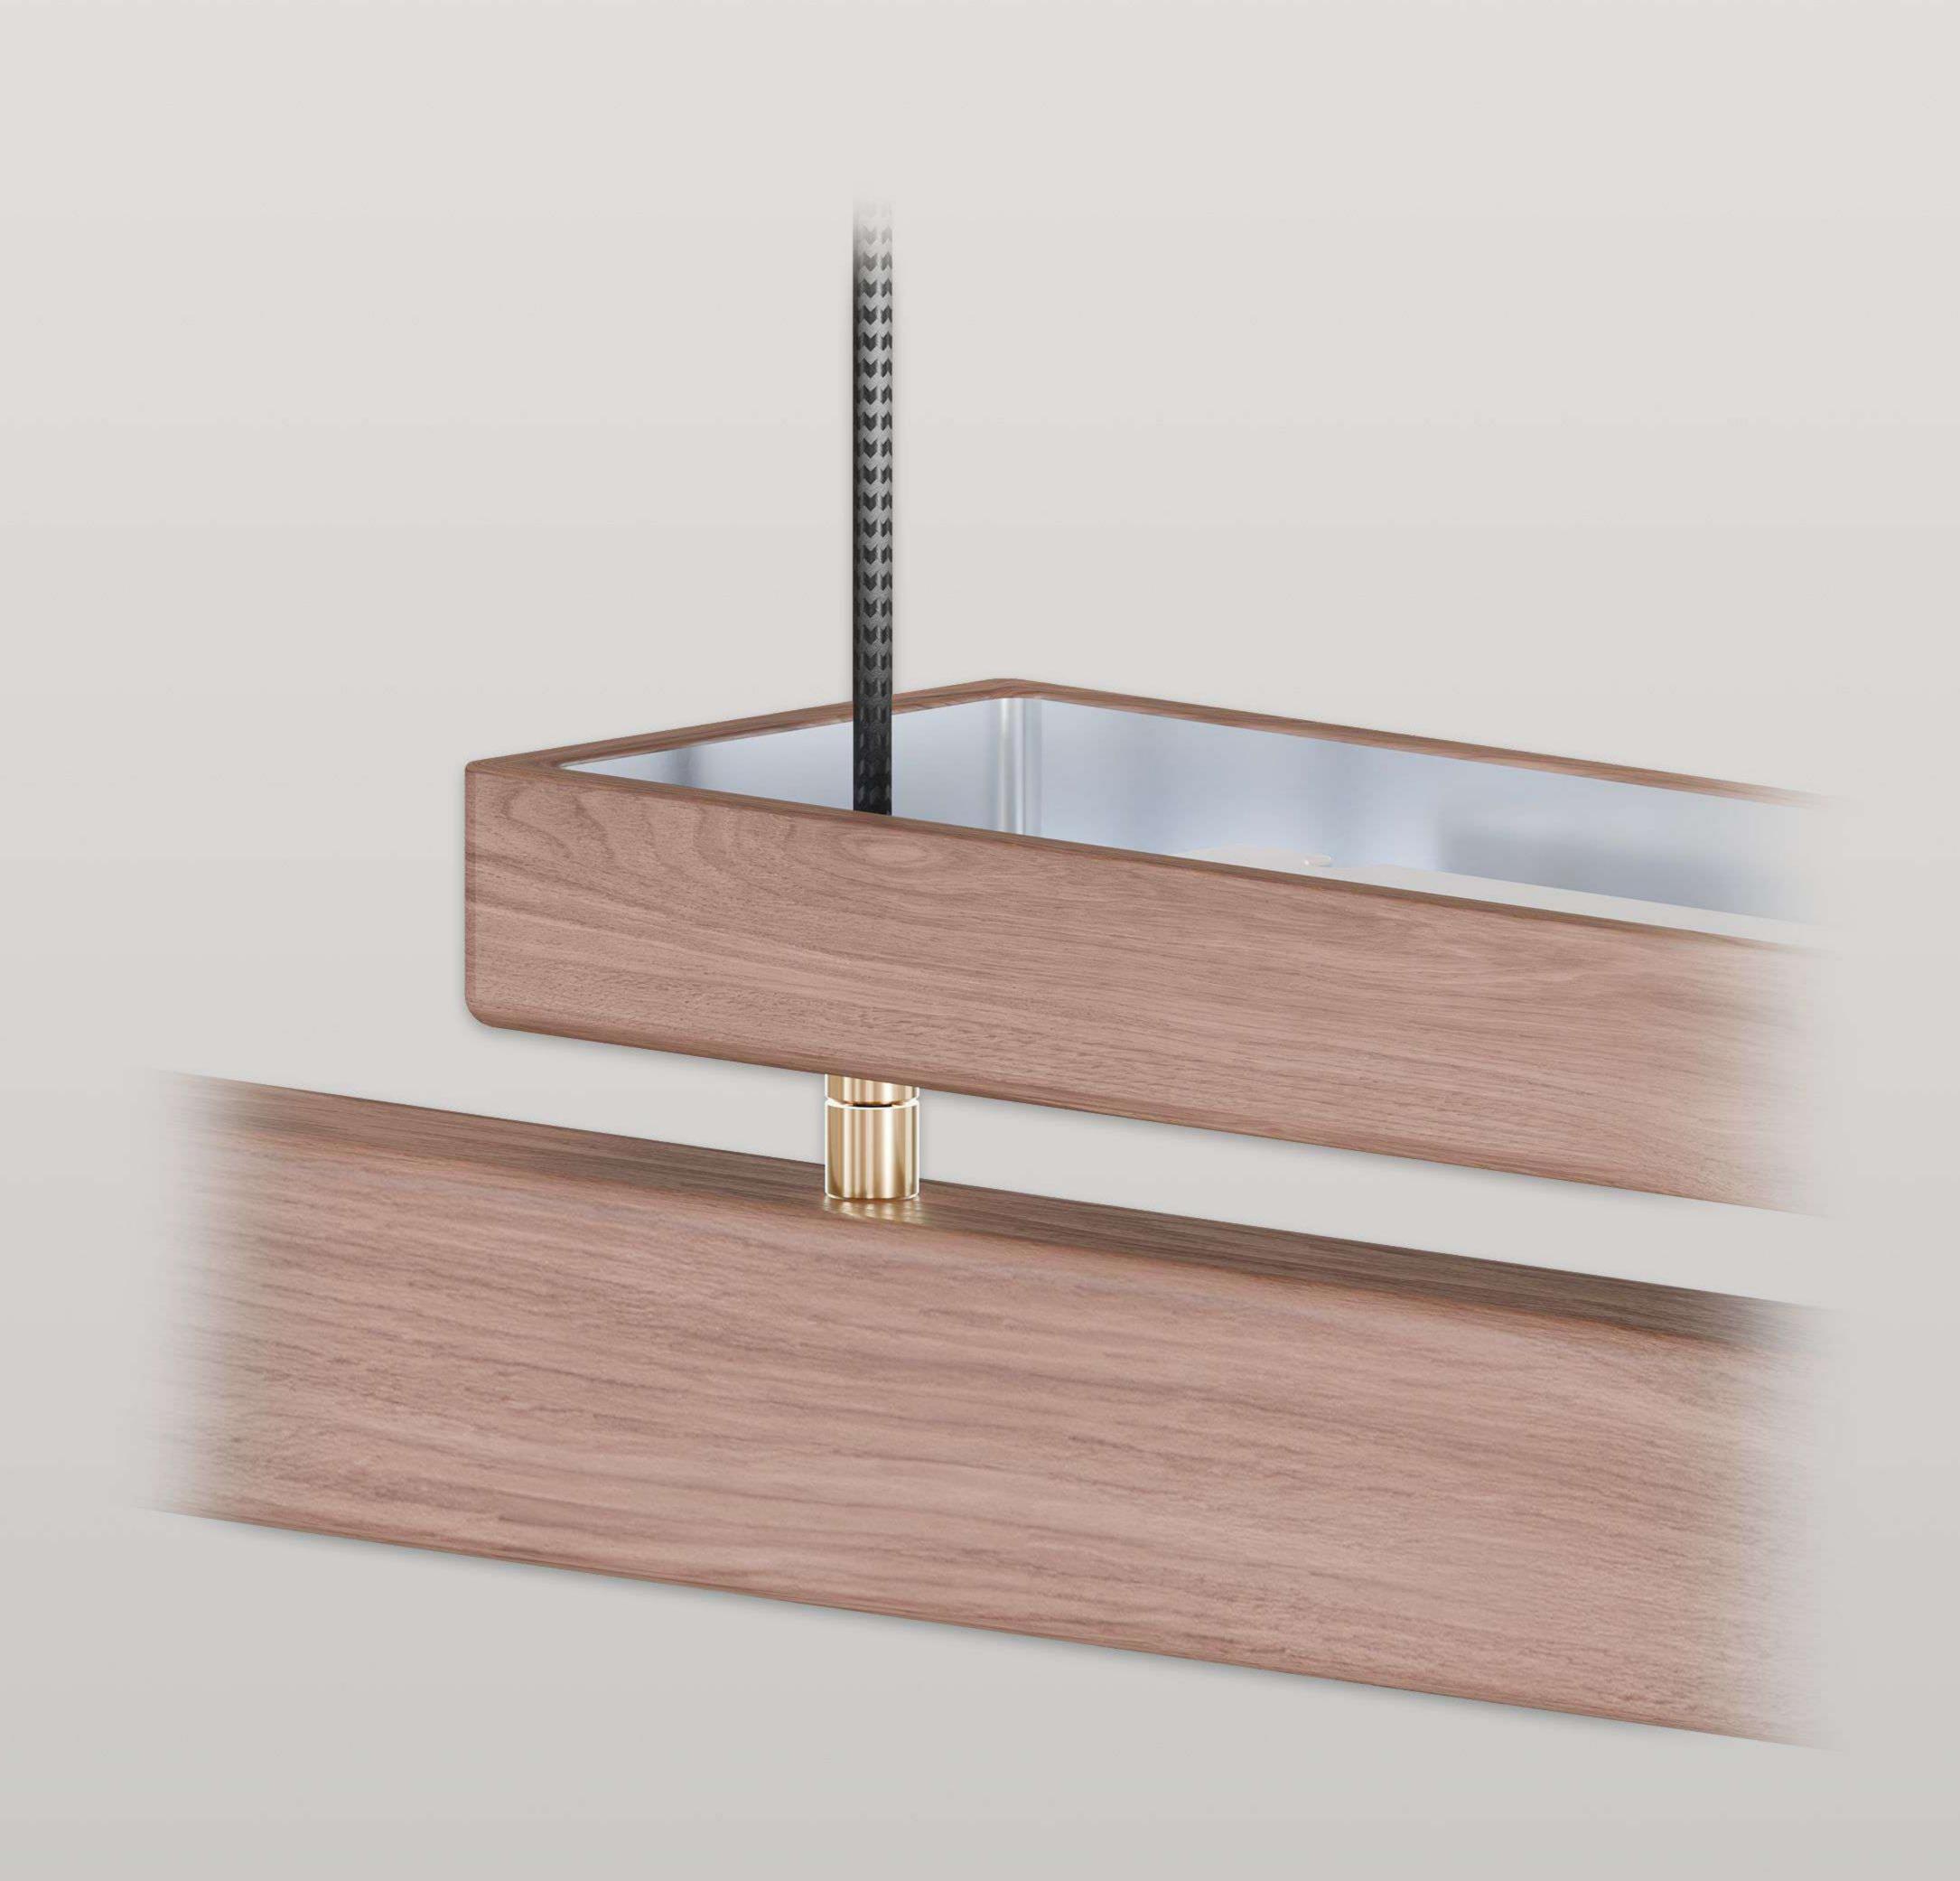




Thread the suspension cables through the canopy cable grips with the excess cable length exiting to the center of the mounting bracket.





Once the desired hanging height has been established, secure the suspension cables in place with three set screws on each canopy cable grip.

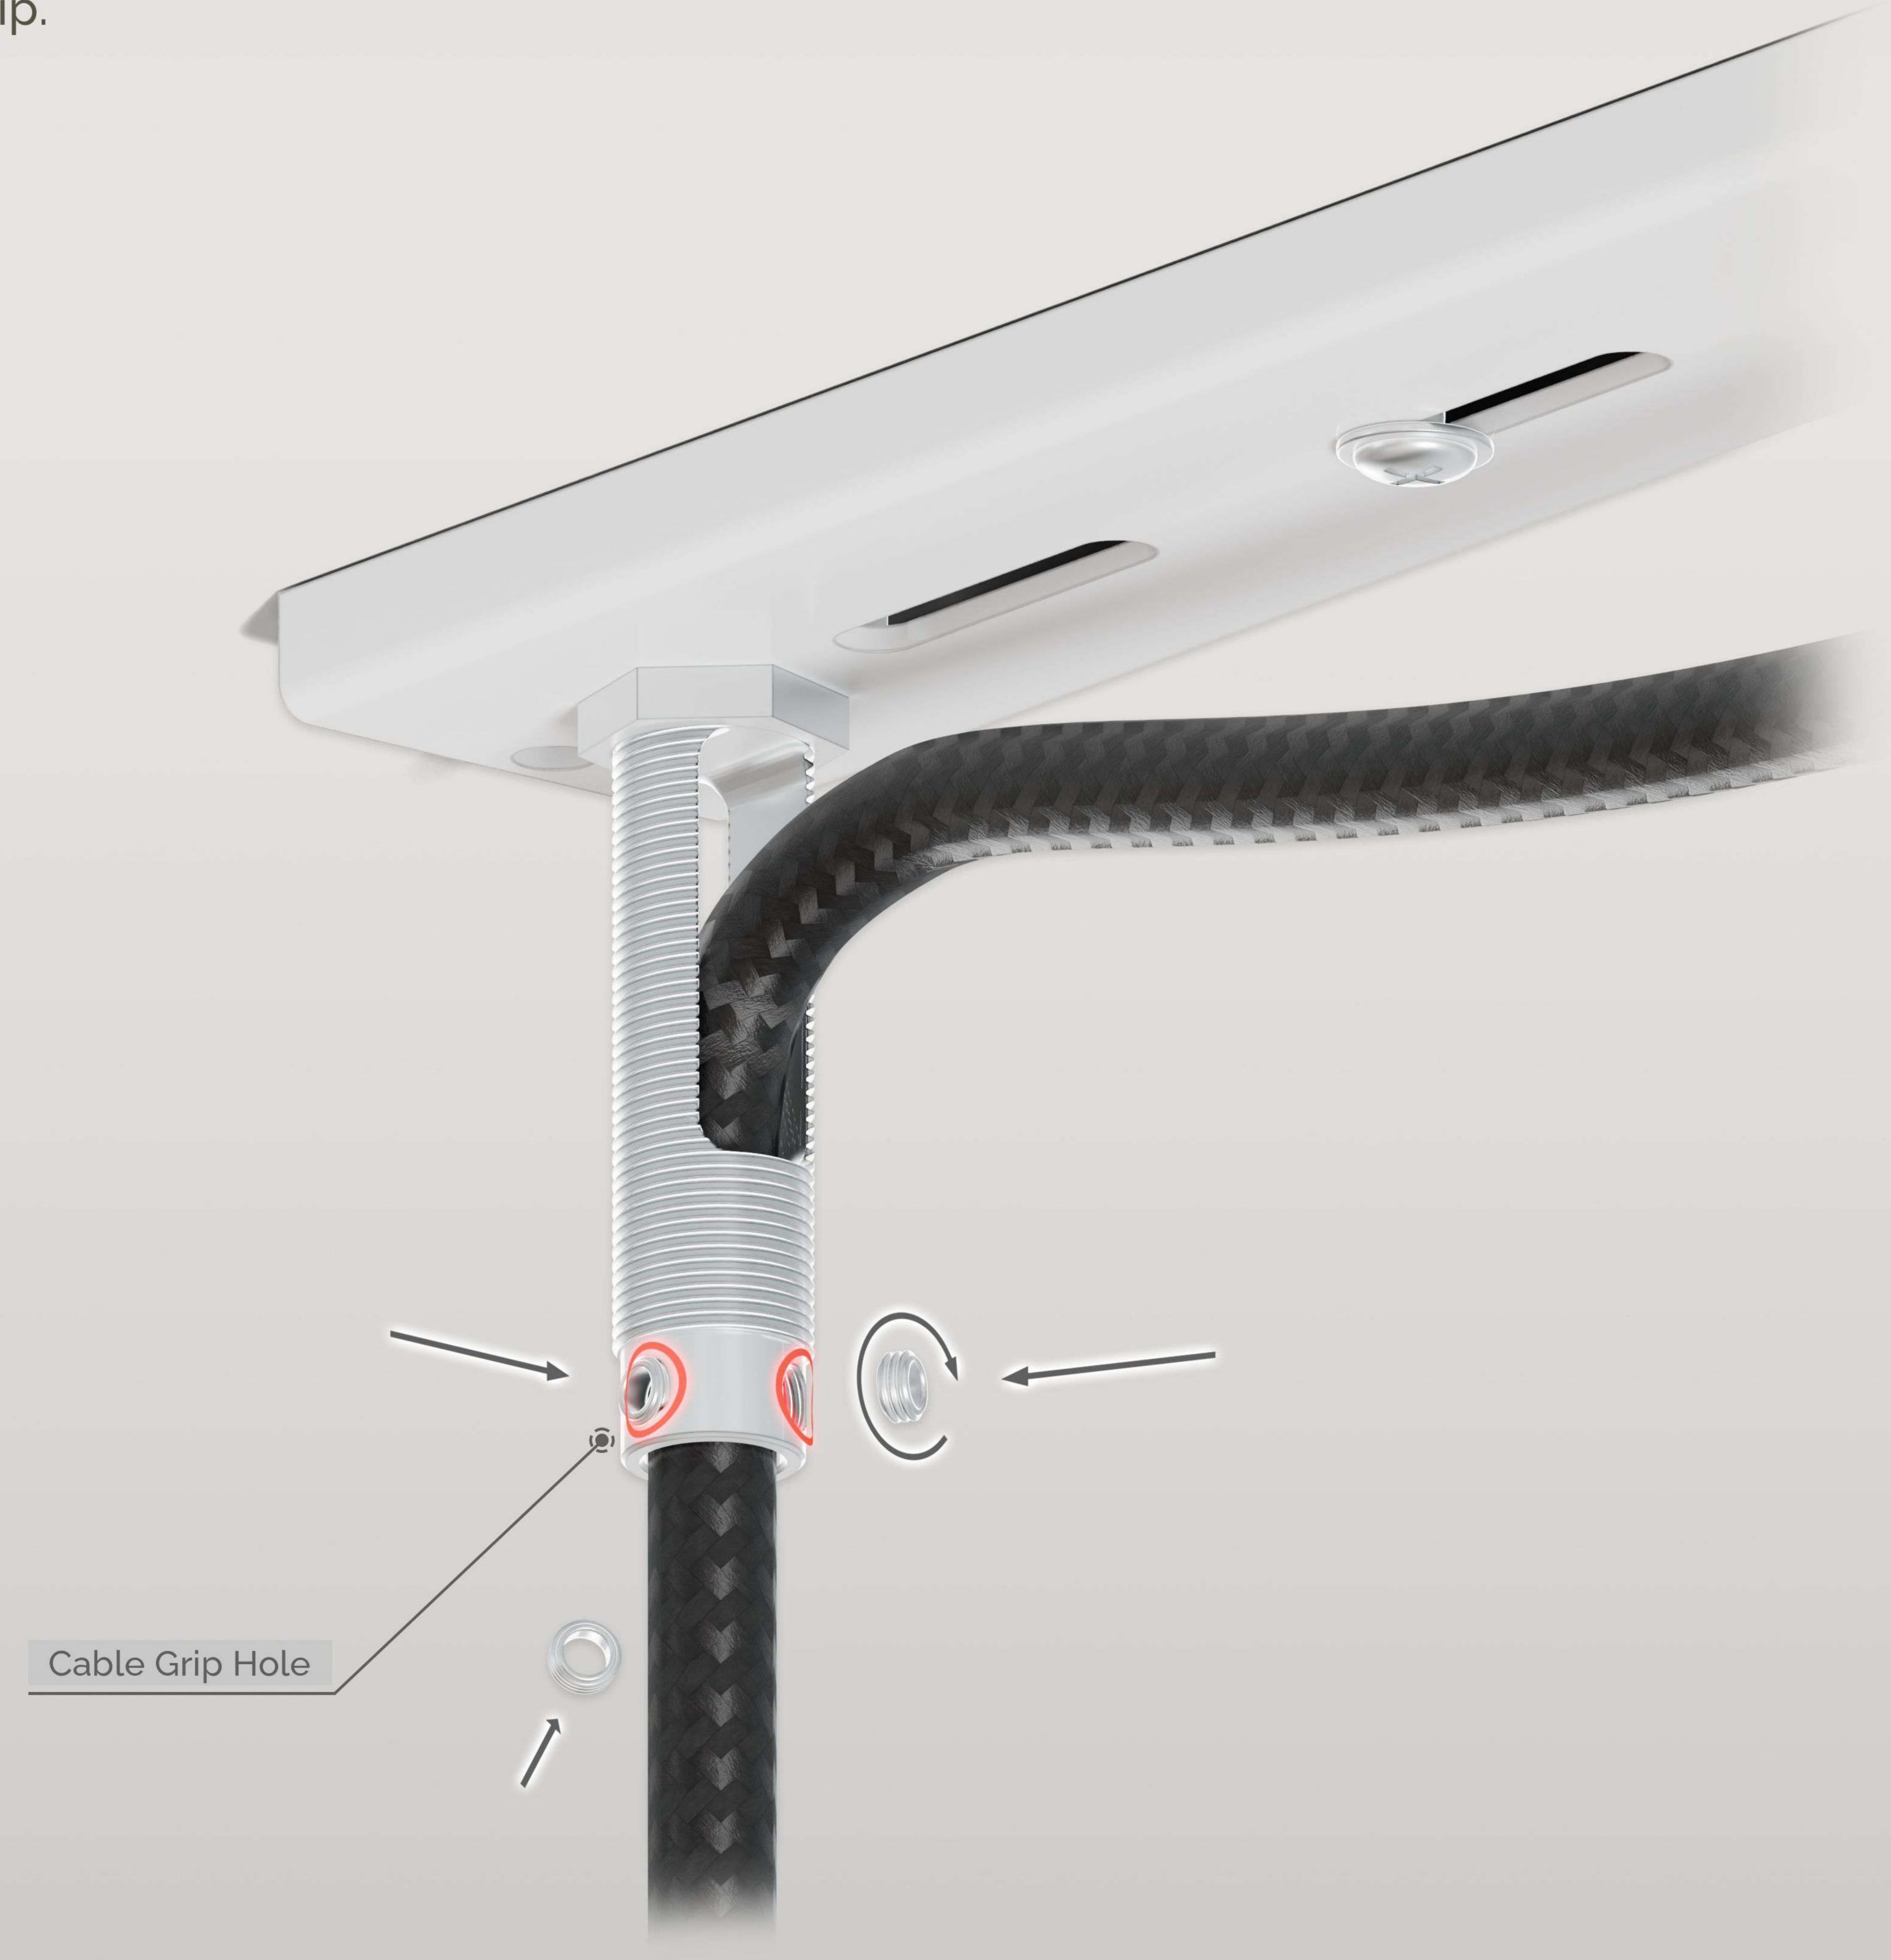



Plug the driver power cord into the input side of the driver. Then, plug the suspension cords into the output side of the driver.

Note: Depending on the configuration of the chandelier, either one or both of the suspension cables may be powered and required to be plugged into the driver. Suspension cords required to be plugged in will have a pre-wired plug on the end.







Carry the canopy up the suspension wires and over the mounting bracket. Secure the canopy in place by threading the barrels onto the canopy cable grips.

