



# Post Sconce

## Install Guide



**Disclaimer :**

Installation, inspection, and maintenance should be performed by qualified electricians to mitigate risks of fire or electrical shock.





# Inspect Contents

NÖRSKA



Light Body



Universal Crossbar



2x Wire Connector



2x Set Screw




1x Ground Screw




# Terminology & Tools Required

---


NÖRSKA

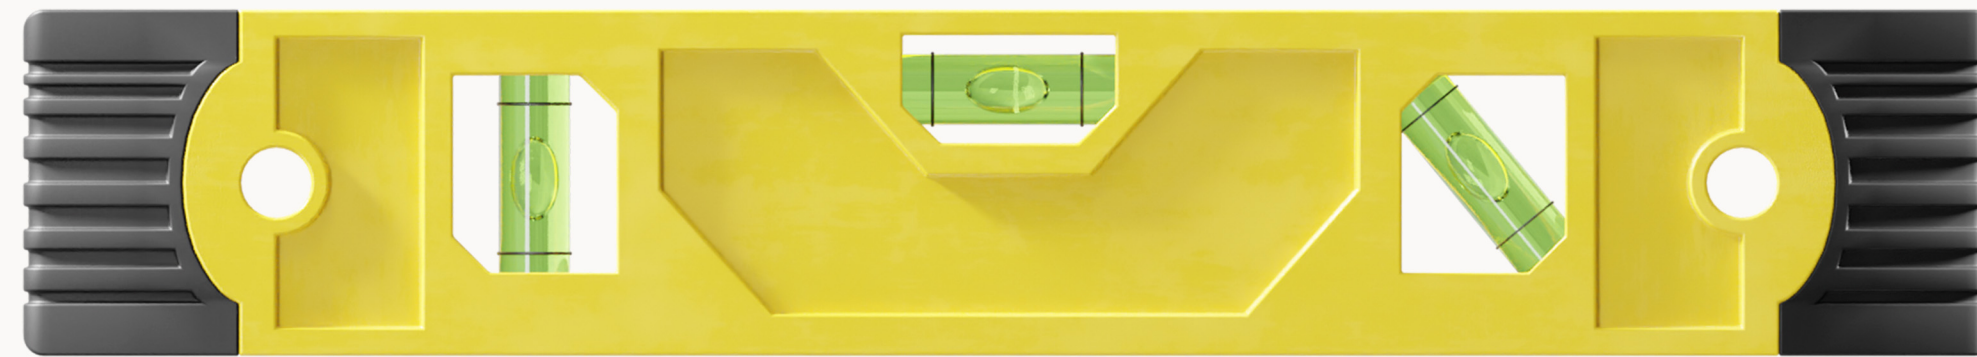

Hand Level  
(Not Included)

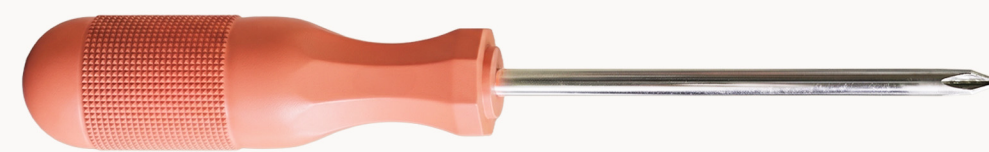

Phillip Screw Driver  
(Not Included)

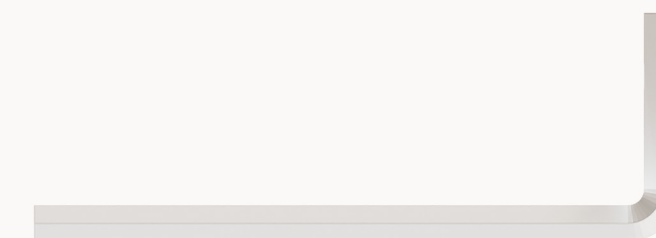

2mm Allen Key  
(Not Included)





# Step 1

NÖRSKA

Pull the electrical from your junction box through the universal crossbar. Mount the crossbar to your wall junction box with the provided machine screws. Ensure the top of the crossbar is level, and the flat shelf of the crossbar is to one side.

**Note :** If mounting the sconce horizontally, place the shelf at the top of the universal crossbar when mounting.

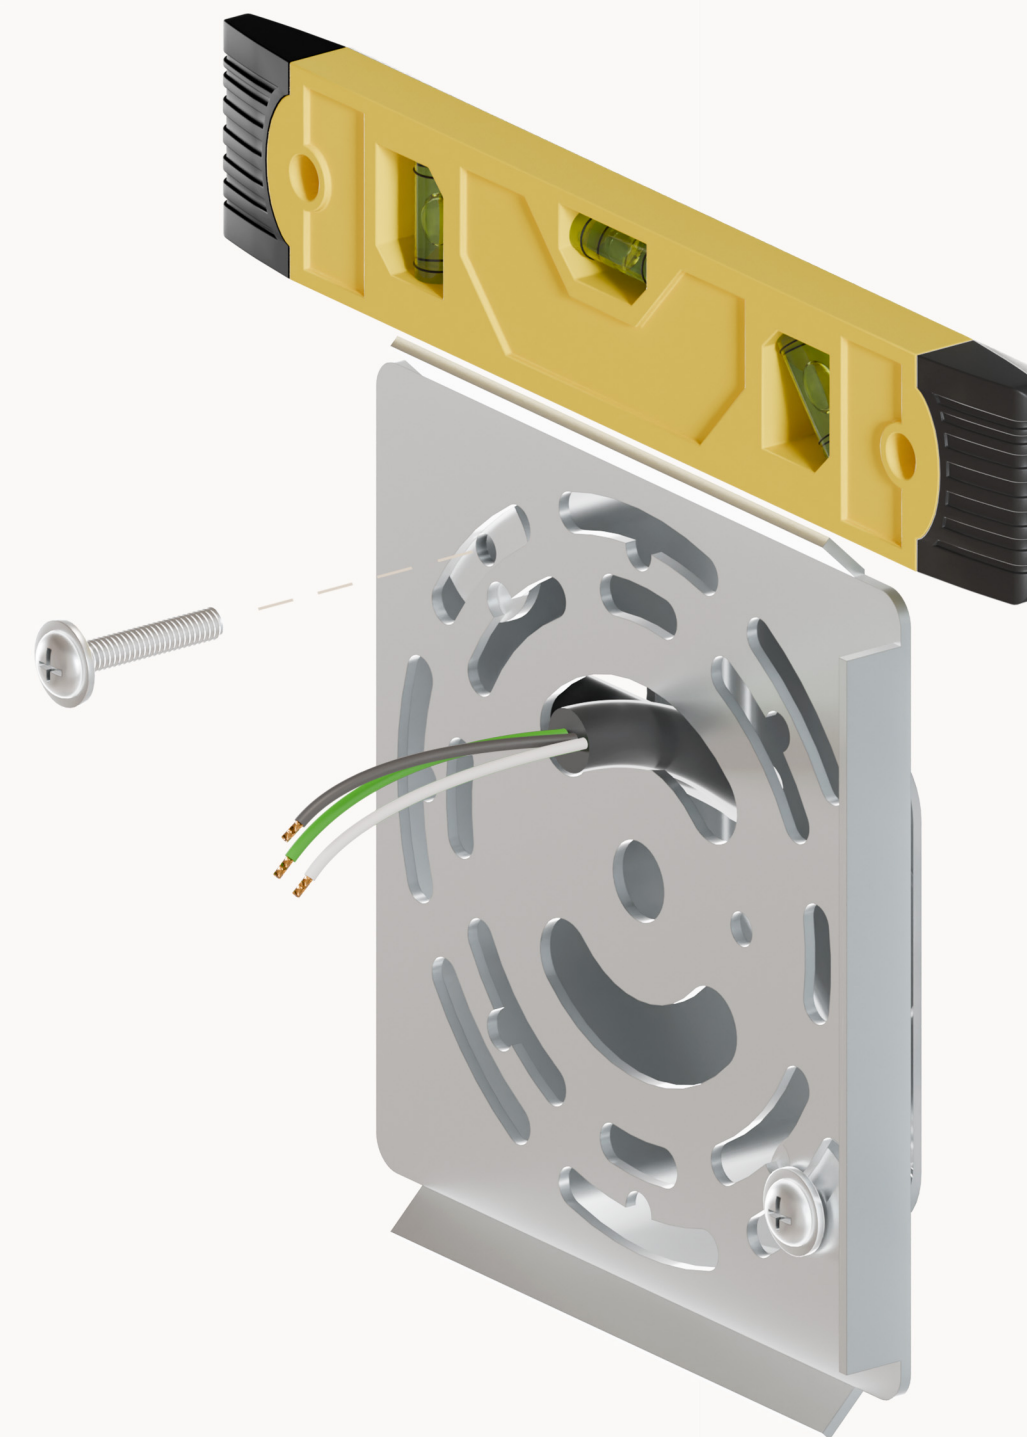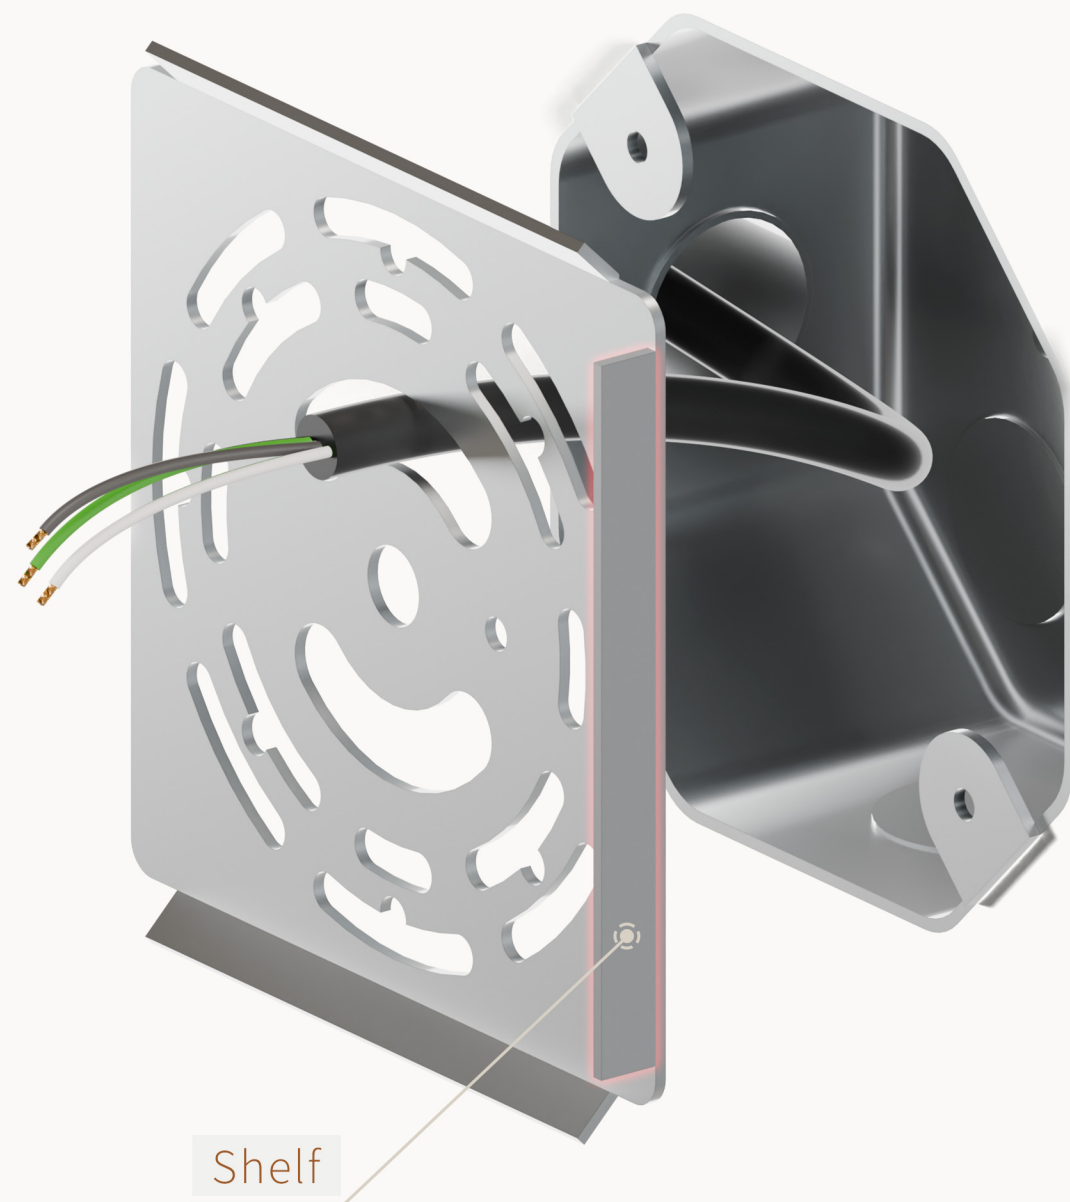




## Step 2

NÖRSKA

Connect the junction box wires to the input wires of the provided LED driver. Connect the ground wire to the crossbar.

**Note** : Ensure junction box wires are connected to the “Input” side of the LED driver. Incorrect wiring is a fire risk.

**Note** : The sconce will come prewired to the “output” side of the LED driver.

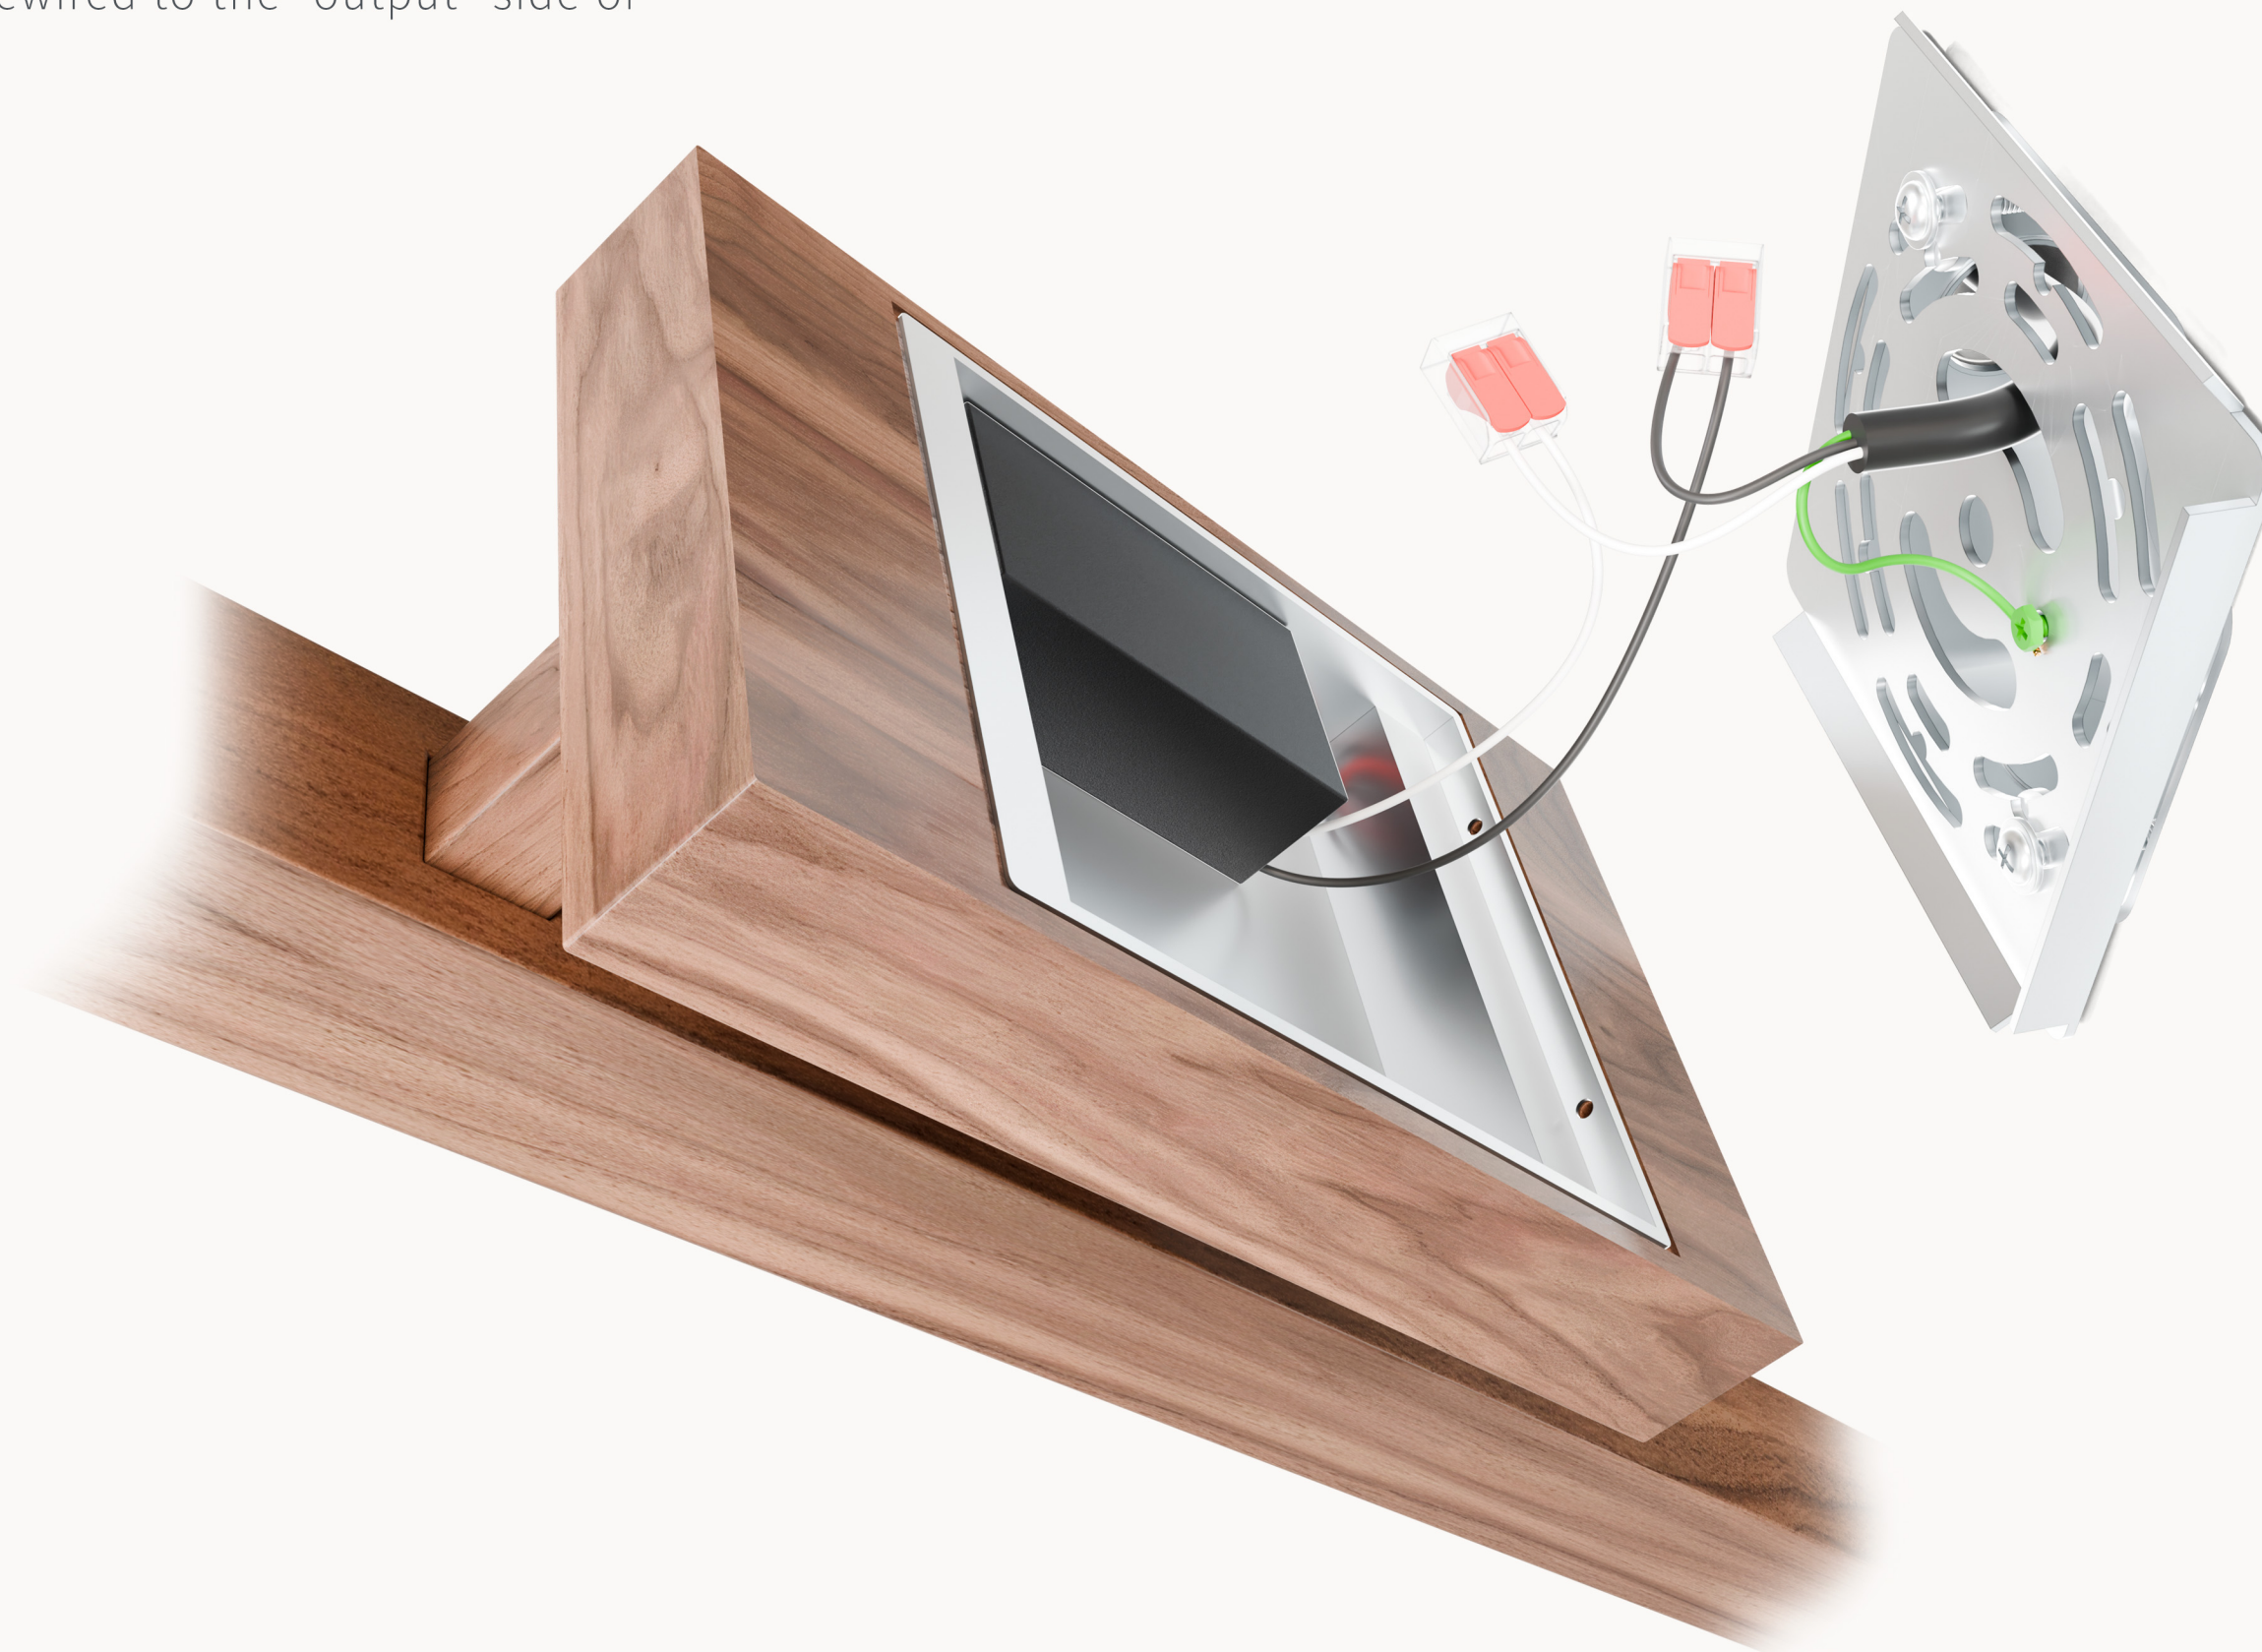




## Step 3

NÖRSKA

Push the wire connection and extra wire into the junction box through the crossbar. Hang the sconce on the crossbar, allowing the french cleat on the back of the sconce to lock onto the crossbar. The LED driver will fit in the cavity on the back of the sconce.

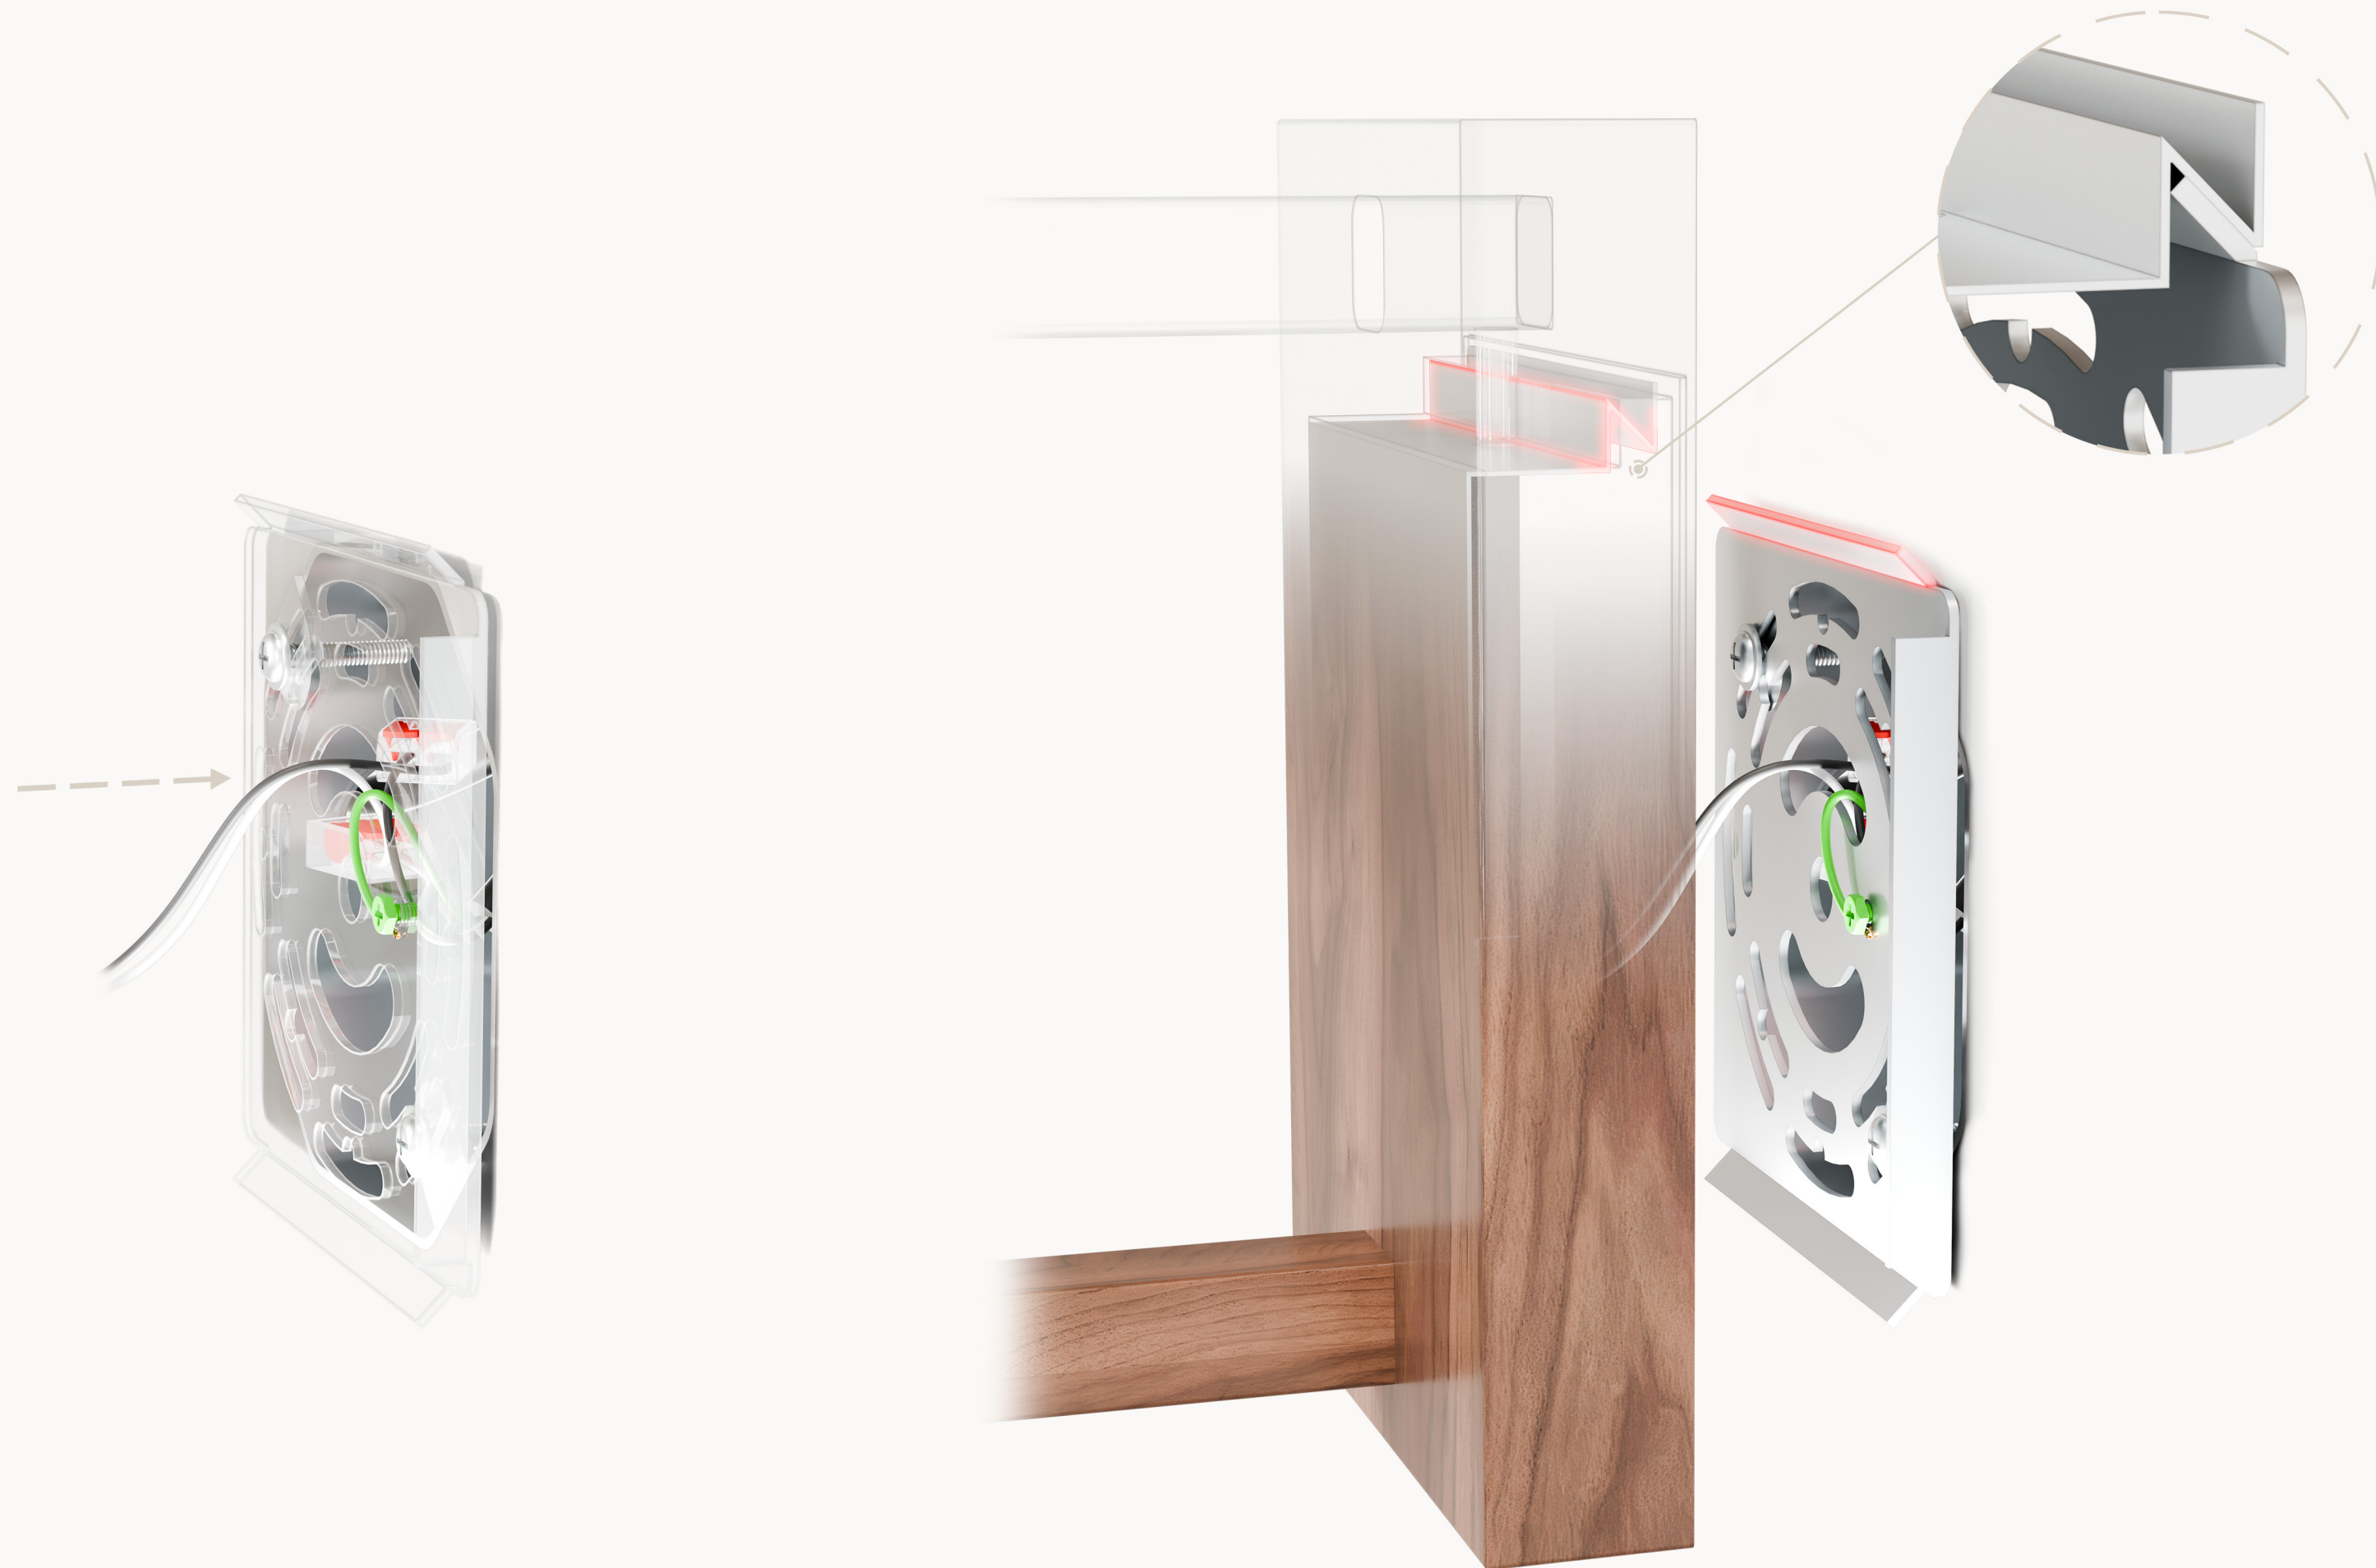



# Step 4

NÖRSKA

Using a 2mm allen key, screw the provided set screw into the hole on the bottom of the scone base plate. Tighten the set screw until it is snug. Doing so will pull the scone tight against the wall surface.

**Note** : Do not over-tighten the set screw.

