Aura Sconce

Install Guide

Disclaimer :

Installation, inspection, and maintenance should be performed by qualified electricians to mitigate risks of fire or electrical shock.

UL CERTIFIED SAFETY US-CA E547507



NorskaUSA.com Sales@NorskaUSA.com 719-338-7146 Handmade in the USA

Inspect Contents

NÖRSKA



Fixture Assembly




2x Machine Screw



3x Wire Connector

Terminology & Tools Required

NÖRSKA

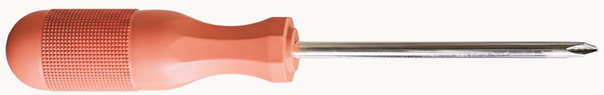

Phillip Screw Driver
(Not Included)



Shade
(Included)



Light Bulb
(Included)



Globe
(Included)



Crossbar
(Included)



Junction Box
(Not Included)

Step 1

NÖRSKA


Unscrew the globe, shade and canopy from the crossbar.



Step 2

NÖRSKA

Secure the fixture crossbar to the junction box using the provided machine screws.

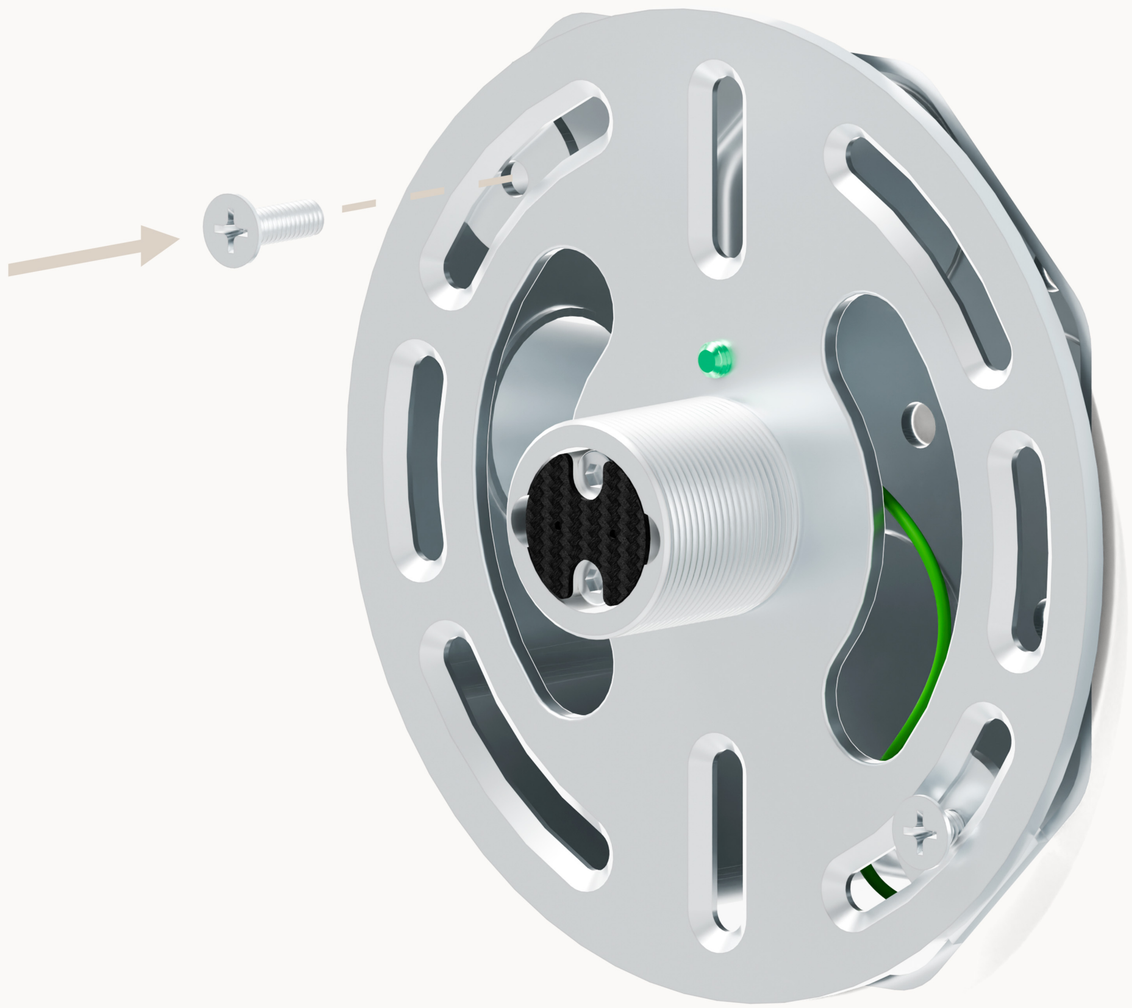

Step 3

NÖRSKA

Connect the fixture wires to the junction box wires using the provided WAGO connectors or UL-listed wire nuts.




Step 4

NÖRSKA

Carefully screw the canopy onto the socket sleeve connected to the crossbar. Then, screw the shade onto the socket sleeve until just snug.

Caution : Ensure the threads are properly aligned before tightening to avoid damage to the threading.

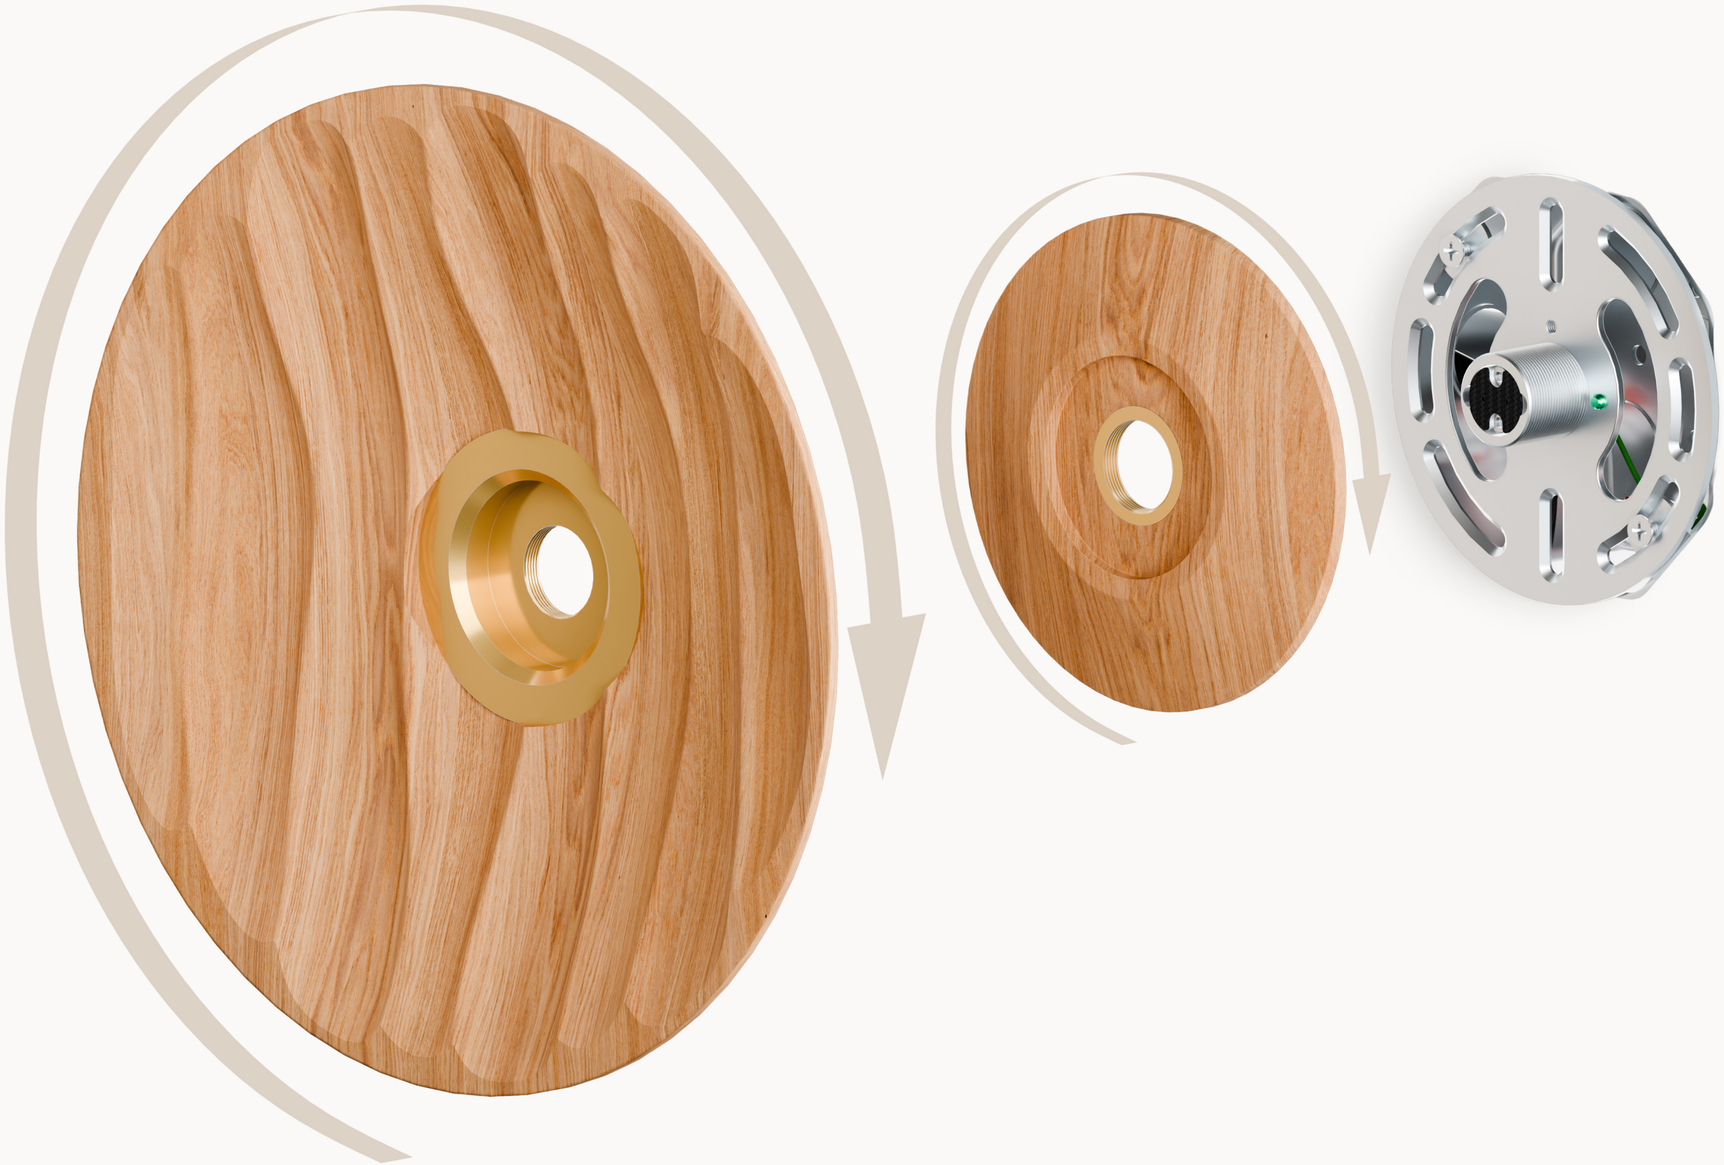

Step 5

NÖRSKA

Gently install the Bi-Pin bulb into the fixture socket.

Caution : Align the Bi-Pin legs properly with the socket holes and press in evenly to avoid damaging the pins or socket.



Step 6

NÖRSKA

Align the glass threads with the socket cover threads and rotate slowly until secure.

Caution : Avoid cross-threading. Do not overtighten, as this may damage the glass or the fixture.

